

This product is sold and supported in the USA by



# LASER LAB SOURCE marketplace for Scientists & Engineers

# contact@LaserLabSoure.com

800.887.5065



# User Manual LTR-1200

Valid for SN:006 to SN:XYZ



# LDD / TEC 19" Rack Enclosure

## Suitable for:

TEC-1089	LDD-1124
TEC-1090	LDD-1121
TEC-1122	LDD-1125
TEC-1123	Third-Party Devices

Meerstetter Engineering GmbH Schulhausgasse 12 3113 Rubigen, Switzerland



Phone: +41 31 712 01 01 Email: contact@meerstetter.ch Website: www.meerstetter.ch

Meerstetter Engineering GmbH (ME) reserves the right to make changes without further notice to the product described herein. Information furnished by ME is believed to be accurate and reliable. However typical parameters can vary depending on the application and actual performance may vary over time. All operating parameters must be validated by the customer under actual application conditions.

# **Table of Content**

1	Devi	ce Overview	4
2	Func	ctional Description	5
	2.1	Device-specific Documentation	5
	2.2	Getting Started	5
	2.3	Menu Structure 2.3.1 Available Device Parameter	6 7
	2.4	Communication Interfaces  2.4.1 LTR-1200 Communication Concept  2.4.2 Connecting LTR-1200 over Ethernet  2.4.3 Service Software Default Address  2.4.4 Access over Third Party Software  2.4.5 Communication Fault Management	8 8 8 9 9 9
3 Technical Data		10	
	3.1	Elements and Configurations	10
	3.2	Front Panel 3.2.1 LCD 3.2.2 Navigation 3.2.3 LED 3.2.4 Digital I/O 3.2.5 RS485 3.2.6 RS232 3.2.7 USB 3.2.8 Ethernet	10 10 10 11 11 12 12 12 13
	3.3	Back Panel 3.3.1 TEC Sensors Pinout 3.3.2 LDD Sensors Pinout 3.3.3 AC Mains Supply	<i>14</i> 14 15 16
	3.4	Error Numbers 3.4.1 RTOS Errors 3.4.2 Routing Errors 3.4.3 HMI Errors	<i>16</i> 16 16 16
	3.5	Physical Dimensions	17
	3.6	License Notice	17
4	Quot	tation Request Form	18



#### **Features**

Rack Enclosure Size: 1U, 400mm in Depth AC Input Voltage: 100..240V / 50..60Hz Space for Devices: Up to 4 LDD / TEC Drivers; Third-Party

Devices (Max 8 Outputs)
- Ethernet 10/100 MBit/s

Data Interfaces: Electrically Isolated

- USB (Virtual Com Port)

(>1kV)

- RS485 - RS232

Digital I/O Signals: Electrically Isolated

- 3 Digital Inputs

(>1kV)

- 1 Digital Output

Human Machine Interface (HMI):

Backlit 2x40 Character Display and 5-Way

Navigation Switch for Local Monitoring and some Main Settings 2 LED (Dual Color)

Status Indication: Forced Air Cooling:

Temperature-Dependent

Fan Speeds

Max Ambient Temperature:

Full load up to 40°C Half load up to 45°C

## **Advanced Operation**

Remote Control: LDD / TEC Service

Software and 'MeCom' Protocol

## **Applications**

Optics (Laser Diodes, Crystals, ...):

 e.g. autonomous turn-key solutions for comprehensive control (supply, cooling) of ps lasers

Electronics (Detectors, RF References, ...):

• e.g. low-noise camera cooling

Instrumentation (Microscopy, Materials, Biochemistry, ...):

• e.g. precision multi-temperature control (thermal zones)

## **General Description**

The LDD / TEC 19" rack enclosure LTR-1200 is a highly configurable, ready-made carrier system facilitating the integration of up to 4 devices belonging to either the LDD-Family of laser diode drivers or the TEC-Family of Peltier/TEC controllers. The system caters for power, cooling and communication.

The combination of built-in devices (models, number) is freely selectable by the customer, their application will dictate the choice (12V or 24V) and number of internal primary DC power supplies. Meerstetter Engineering will take care of the integration and provide a fully configured turnkey solution.

Up to 4 fans drag air sidewise through the rack enclosure. Their speed is managed by intelligent fan control on a dedicated PCB such that aircooling becomes effective upon prolonged use at high ratings.

For table-top operation, the rack mounting brackets can be removed.

The current status of the rack enclosure and of the built-in devices are indicated on the front side display (2x40 characters) and by dual color LEDs. The most important settings (parameters of the built-in devices and of the front side data interfaces) can be adjusted over the 5-way navigation switch.

For advanced operation and configuration, all internal devices can be addressed over one of the electrically isolated interfaces; therefore the originally supplied TEC and/or LDD Service Software's can be used.

For continuous monitoring and control by customers' systems, the serial communication protocol 'MeCom' can be used: on one hand, it allows direct control of the each built-in LDD and TEC device, on the other hand it allows polling further information about the overall system status.

For fast signals (such as LDD pulse triggering) three digital (electrically isolated) input lines are available. Also, one digital output is available (e.g. for error indication).

The integration of third party hardware (such as fiber-coupled diode lasers) is possible if dimensional requirements are met.

Page 4 (18) **5171C** 

31.07.13 TB 22.10.14 SK

LTR-1200

**User Manual** 



# 2 Functional Description

## 2.1 Device-specific Documentation

The following devices can be installed into the LTR-1200. Some of these devices can be connected in parallel to achieve higher output currents. Please contact Meerstetter Engineering if you have requirements which currently are not covered by any of these devices.

require	ements which currently are not covered by a	any of these devices.
LDD-F	Family (Laser Diode Drivers)	TEC-Family (Thermo Electric Cooling Controllers)
•	LDD-1121	• TEC-1089
•	LDD-1124	• TEC-1090
•	LDD-1125	• TEC-1122
		• TEC-1123
	nctional description and the technical data oneets and User Manuals.	of these devices are documented in their own specific
2.2	Getting Started	
1.	Connect the LTR-1200 to the mains power	er and switch it on.
	☐ The display shows the start scree	en
2.	Wait until the LTR-1200 has finished start	up.
	$\ \square$ The display now shows the main	screen
	□ No error is indicated (both LEDs a	are green)
3.	Use the navigation switches to browse the chapter 2.3 Menu Structure	rough the Menu. The Menu structure is documented in
4.		e of the two options below): ect please refer to 2.4 Communication Interfaces)
		es. ble applications) to several devices are possible. ble PCs) to one device are possible.
	<ul> <li>Set up the IP configuration</li> <li>Ethernet)</li> </ul>	on (See chapter 2.4.2 Connecting LTR-1200 over
	<ul> <li>Connect the Ethernet call</li> </ul>	ole.
	□ USB: Easy on-site connection. Only one device at the same time	<b>e</b> .
_	<ul> <li>Connect the USB Cable.</li> </ul>	
5.	Connect the corresponding (TEC or LDD) (Notice that you establish a connection to meanings. See chapter 2.4.1 LTR-1200 C	a device. "Device" and "Terminal" have different
	<ul><li>Set up the Service Software conr Device-specific Documentation)</li></ul>	nection in the Maintenance Tab (See chapter 2.1
	When the Software is successfull the Monitor tab will be updated per	y connected it will show a green status "Connected" and eriodically.
	<ul> <li>If you connect over Ethernet and procedure for all devices to connect</li> </ul>	wish to connect to multiple devices repeat this ect.


6. Now the device(s) are connected. The device configuration and the various setting options are described in the device-specific User Manuals. (See chapter 2.1 Device-specific Documentation)

#### 2.3 Menu Structure

The Menu is created dynamically depending on the installed devices. Only the Terminals to which a device is connected are shown in the Menu. Each Terminal has its own Menu entry where the most important settings of this Terminal can be adjusted. There is also a small overview for each Terminal.

Because there are so many parameters for each Terminal there is only a small selection of parameters available through the display menu.

Below there is an example of the Menu structure with a TEC controller connected to Terminal 1 and an LDD connected to Terminal 2.

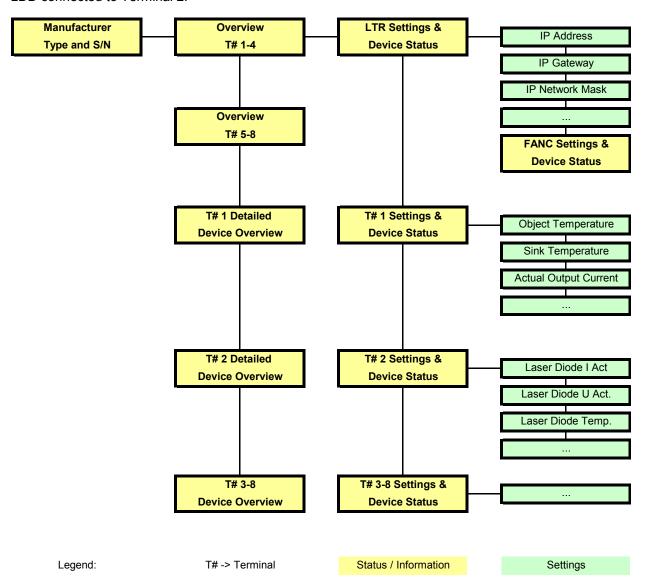

To navigate through the Menu use the 5-way navigation switch.

Settings marked with [-/R] have read only permissions.

Settings marked with [R/W] can be modified through the menu. Simply press the OK Button to switch to the editing mode. Use left and right to switch between the digit positions. Use up and down to change the digits value. Press OK to confirm the setting change.

Errors are shown on the overview screen with a symbol. For a description of the different Symbols see 3.2.1 LCD. A detailed Error Report will be shown on the device specific Menu screen.

Page 6 (18) <b>5171C</b>	31.07.13 TB 22.10.14 SK	LTR-1200	User Manual	meerstetter engineering
-----------------------------	----------------------------	----------	-------------	----------------------------

#### 2.3.1 Available Device Parameter

Additional Parameters are available on request. Please contact Meerstetter Engineering for an inquiry.

#### 2.3.1.1 LTR-1200

- IPv4 Address
- Gateway IPv4 Address
- IPv4 Network Mask
- Service Software Default Device
- Interface RS232 Baud Rate
- Interface RS485 Baud Rate
- HMI Device Address
- Internal Maximal Temperature
- Internal Maximal Fan-Speed

#### 2.3.1.2 LDD

- Laser Diode Current Actual
- Laser Diode Voltage Actual
- Laser Diode Temperature
- Laser Power Actual
- Laser Diode Driver Enable
- Laser Diode Current CW
- Laser Diode Power CW

#### 2.3.1.3 TEC

- Object Temperature
- Sink Temperature
- Actual Output Current
- Actual Output Voltage
- Output Stage Enable
- Target Object Temp


#### 2.4 Communication Interfaces

## 2.4.1 LTR-1200 Communication Concept

The LTR-1200 is equipped with several communication interfaces, which can be used simultaneously. Every communication interface has its own receiving buffer.

The router will process every received message. The message is forwarded to the desired device. As soon as the router task has received the responding message from the device, the message is forwarded to the corresponding interface.

Every communication interface has the same priority. All messages are processed successively.

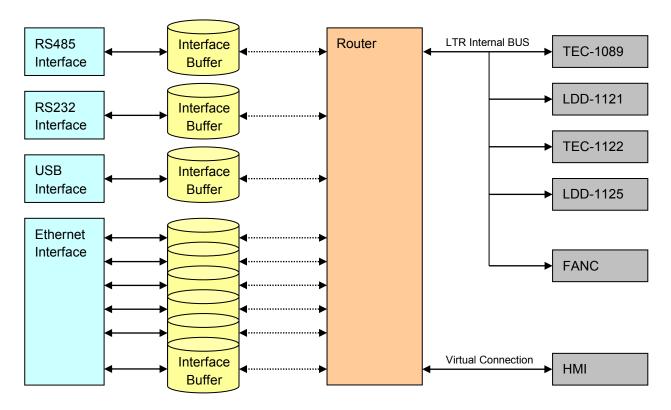

A connection is always between one control software and one device. The Terminal, device number and Channel are not directly associated.

Terminal represents only the output on the Back-Plane of the LTR-1200. One device can be connected to more than one Terminal.

Channel represents the output channel of one device (*e.g.* CH1 or CH2 in the case of TEC controllers.) Please consult the "LTR-1200 Configuration Sheet" (which was supplied with the LTR-1200) to find out which device channel is connected to which Terminal.

## 2.4.2 Connecting LTR-1200 over Ethernet

The LTR-1200 does not support DHCP. A fixed IP Address configuration must be set over the display menu. Please set the following settings:

- IP Address
- Gateway Address (required for routing)
- Network Mask

Please try to access to the built-in LTR-1200 web server by entering the previously configured IP Address to your web browser.

Page 8 (18) <b>5171C</b>	31.07.13 TB 22.10.14 SK	LTR-1200	User Manual	meerstetter engineering
-----------------------------	----------------------------	----------	-------------	-------------------------

#### 2.4.2.1 Ethernet Connection

Please refer to 2.1 Device-specific Documentation to connect the Service Software over Ethernet. The Device Address (Device to be addressed) can be found on the LTR-1200 Menu or on the Built-in web site. It usually is the same as the Terminal Number. The LTR-1200 provides a total of six connections (TCP/IP, Port 50000, Timeout: 10s) to control the LDD/TEC Drivers over Ethernet. For Third Party Software communication please refer to the MeCom communication protocol specifications (See chapter 2.1 Device-specific Documentation).

#### 2.4.3 Service Software Default Address

In some cases it may be helpful to configure a default LDD/TED driver as standard device. This can be done by setting the 'Service Software Default Device' parameter to a specific LDD/TEC Device Address in the Display menu. In this case the Device Address 0 will be routed to the 'Service Software Default Device'.

## 2.4.4 Access over Third Party Software

For Third Party Software communication please refer to the MeCom communication protocol specifications (See chapter 2.1 Device-specific Documentation).

#### 2.4.5 Communication Fault Management

#### 2.4.5.1 For RS485, RS232 and USB Interfaces

A received MeCom-Package with a wrong CRC is not being processed, no error is generated. If a MeCom-Package is being forwarded to a device (LDD/TEC) and no answer is received from the device, no error is generated. The sending host must repeat the MeCom-Package.

#### 2.4.5.2 For Ethernet Interface

A received MeCom-Package with a wrong CRC results in closing the corresponding TCP connection. If a MeCom-Package is being forwarded to a device (LDD/TEC) and no answer is received from the device, the MeCom-Package is being sent to the device two more times. If still no answer is received, the TCP connection is closed by the LTR-1200.


## 3 Technical Data

## 3.1 Elements and Configurations

Each rack enclosure is equipped and configured to the customer's specifications:

- Up to four LDD-Family or TEC-Family devices can be built in (See 4 Quotation Request Form).
- The number of required power supplies and fans depends on types, numbers and applications of the built-in devices. Meerstetter Engineering equips the LTR-1200 accordingly.
- The LTR-1200 is back panel configurable, the standard panel offers 4 power output terminals and 4 sensors inputs connectors. (Up to 8 Terminals are possible)
- It is also possible to install third party devices. Please contact Meerstetter Engineering with your enquiry.
- Important note concerning the integration of LDD-Family devices into LTR-1200 rack enclosures: The internal wiring from an LDD device to its back panel terminal can measure several 10cm and represents an inductive load. Therefore, fast pulsing performance will be impaired.

#### 3.2 Front Panel

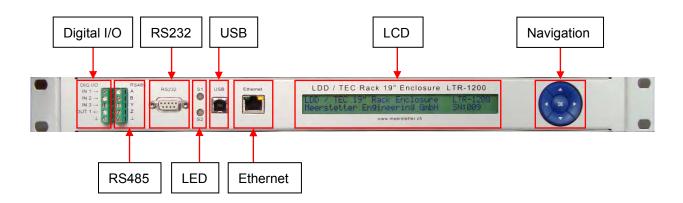

#### 3.2.1 LCD



The picture shows the LCD display of an LTR-1200 with 4 devices built-in.

Symbols on the LCD Display						
	O	Ξ	√	×		
First Symbol (next to TEC/LDD)	Device is 'Ready'	Other (Reset, Restart, Bootloader,)	Device is 'Running'	Device has an Error		
Second Symbol (if type is TEC)	Not in Temperature Control Mode	'Wait' (not stable, yet)	Stability Reached	-		

## 3.2.2 Navigation

There is a five-point navigation switch available to browse through the Menu. This can be used to change the most important settings of the internal devices.

Page 10 (18) <b>5171C</b>	31.07.13 TB 22.10.14 SK	LTR-1200	User Manual	meerstetter engineering
------------------------------	----------------------------	----------	-------------	----------------------------

## 3.2.3 LED

Dual Color Status LEDs			
LED Sources (grouped)			
S1 (top)	LTR Components (HMI, Fan Controller)		
S2 (bottom) Built-in Devices (LDDs, TECs)			

Grouped status code is prioritized, i.e. if one output stage is running, the grouped LED shows 'Run', if one device has an error, the grouped LED shows 'Error'.

LED Status Description (S1, S2)				
Color Pattern Signification				
Green	Slowly blinking	'Ready' status (no Error)		
Green	Blinking fast	'Run' status (no Error)		
Red	Static on	'Error' status, output stages disabled		
Red	Slowly blinking	Unknown Device Status, but no Error		

# 3.2.4 Digital I/O

## 3.2.4.1 Pinout

Туре	DIG IO Label	LDD-112x	TEC-1122/1123	TEC-1089/1090	LTR-1200
Input 1	IN1 →	RES8	RES8	RES1	Special
Input 2	IN2 →	RES7	RES7	RES2	Function
Input 3	IN3 →	RES6	RES6	RES3	available
Output 1	OUT ←	RES5	RES5	RES4	on request
GND	上	Digital IO Ground			

All digital I/Os are ESD-protected and have a series and pull-down resistor.

## 3.2.4.2 Characteristic

Symbol	Parameter	Comments	Min	Тур	Max	Units			
Digital Iso	Digital Isolator Characteristics								
V <sub>ISO</sub>	Isolation Voltage		1	-	2.5	kV			
f <sub>TRANSFER</sub>	Transfer Frequency	NRZ (No Return to Zero)	0		25	MHz			
t <sub>PHL</sub> , t <sub>PLH</sub>	Propagation Delay			45	60	ns			
Input Cha	racteristics (Digital Isolator)								
V <sub>IH</sub>	Logic High Input Threshold		2.31			٧			
VIL	Logic Low Input Threshold				0.99	V			
VIMAX	Max Input Voltage		-0.5		5.5	V			
Output Cl	naracteristics (Digital Isolator)								
V <sub>OH</sub>	Logic High Output Voltage	Output Current 20uA	3	3.3		V			
VoL	Logic Low Output Voltage	Input Current 20uA		0	0.1	V			
Vohl	Logic High Output Voltage (Hi Load)	Output Current 4mA	2.8	3.1		٧			
V <sub>OLL</sub>	Logic Low Output Voltage (Hi Load)	Input Current 4mA		0	0.4	٧			
ESD Prot	ESD Protection (between Digital Isolator and Connector)								
V <sub>PP</sub>	ESD Discharge	IEC61000-4-2			100	kV			
RA	Series Resistance		170	200	230	Ω			

meerstetter engineering	User Manual	LTR-1200	31.07.13 TB 22.10.14 SK	Page 11 (18) <b>5171C</b>
-------------------------	-------------	----------	----------------------------	---------------------------

## 3.2.5 RS485

## 3.2.5.1 Pinout

RS485 Label	Half-Duplex Connection				
Α				Α	
В			_	В	
Υ					
Z					
				GND	

## 3.2.5.2 Characteristic

Symbol	Parameter	Comments	Min	Тур	Max	Units		
Digital Iso	Digital Isolator Characteristics							
V <sub>ISO</sub>	Isolation Voltage		1	-	2.5	kV		
Speed	Communication Speed (Baud Rate)	Software Setting	4800		1M	bps		
V <sub>PP</sub>	ESD Protection	Human Body Model			+-15	kV		
Input Cha	paracteristics (Receiver)  Differential Input Threshold Voltage		-200	-125	-30	mV		
V <sub>HYS</sub>	Input Voltage Hysteresis			15		mV		
R <sub>IN</sub>	Line Input Resistance		96			kΩ		
Output Characteristics (Driver)								
V <sub>OD1</sub>	Differential Output Voltage, Loaded	R <sub>L</sub> = 100Ω (RS422)	2.0		3.6	V		
V <sub>OD2</sub>	Differential Output Voltage, Loaded	R <sub>L</sub> = 54Ω (RS485)	1.5		3.6	V		

## 3.2.6 RS232

## 3.2.6.1 Pinout

Pin	Function
2	TxD (Data from LTR)
3	RxD (Data to LTR)
5	Signal Ground (GND)
other	Not Connected

## 3.2.6.2 Characteristic

Symbol	Parameter	Comments	Min	Тур	Max	Units		
Protection	Protection Characteristics							
V <sub>ISO</sub>	Isolation Voltage		1	-	2.5	kV		
V <sub>PP</sub>	ESD Protection	Human Body Model			+/-15	kV		
Electrical	Electrical Characteristics							
Speed	Communication Speed (Baud Rate)	Software Setting	4800		1M	bps		
Vон	High-level Output Voltage	TxD at $R_L = 3k\Omega$ to GND	5	5.5		٧		
VoL	Low-level Output voltage	TxD at R <sub>L</sub> = 3kΩ to GND	-5	-5.4		٧		
V <sub>IT+</sub>	Positive Input Threshold Voltage			1.5	2.4	V		
V <sub>IT</sub> -	Negative Input Threshold Voltage		0.6	1.2		٧		

Page 12 (18) <b>5171C</b>	31.07.13 TB 22.10.14 SK	LTR-1200	User Manual	meerstetter engineering
---------------------------	----------------------------	----------	-------------	----------------------------

#### 3.2.7 USB

The USB interface is electrically isolated. A virtual COM Port is provided for communication with a host PC. The drivers are the same as the ones already required / installed for the individual internal devices. (Used chip: FTDI FT232RQ)

#### 3.2.7.1 Characteristic

Symbol	Parameter	Comments	Min	Тур	Max	Units	
Protection	Protection Characteristics						
V <sub>ISO</sub>	Isolation Voltage		1	-	2.5	kV	
$V_{PP}$	ESD Protection	Human Body Model			+/-15	kV	
Electrical	Electrical Characteristics						
Speed	Communication Speed (Baud Rate)	Software Setting	4800		1M	bps	

## 3.2.8 Ethernet

#### 3.2.8.1 Specifications

The Ethernet meets the following specifications:

- IEEE 802.3 compliance
- 100BASE-TX and 10BASE-T compliance
- Auto Negotiation (Automatically switch between 10Mbit/s / 100Mbit/s, Half -/ Full-Duplex)
- Auto MDIX (Auto crossover)
- Optional VLAN (available on request)
- Optional IEEE 1588: Precision Time Protocol (available on request)

## 3.2.8.2 LED Description

	Green	Orange
Off	Not connected	10Mbit/s
Blink	Activity	1
On	Connected	100Mbit/s

## 3.2.8.3 Available Features

- Small embedded website
- Service Software communication
- MeCom protocol

#### 3.3 Back Panel

Picture of 4 Terminal Version. (Only approx, the Sensor connectors are wrong)



Picture of the 8 Terminal Version:



By standard, the GND potentials of all built-in TEC and LDD devices are interconnected. Consequently, all external loads and sensors to be attached to the back panel should be potential-free. At the most, only one single potential (e.g. GND of one laser diode) may be tied to a given potential; it is however recommended to keep all loads and sensors potential-free.

Upon customer request, individual outputs can be equipped such that they are potential-free (i.e. independent of other built-in devices). Please contact Meerstetter Engineering with your enquiry

#### 3.3.1 TEC Sensors Pinout

Fully pre-confectioned cables are available from Meerstetter Engineering at request.

#### 3.3.1.1 Part List

Description	Manufacturer	Manufacturer Part Nr.
Connector Solder 7-Way	Binder	99-4925-00-07
Cable 6-Way, Shielded	Kabeltronik	2-LifYCY TP (820600800)

#### 3.3.1.2 Pinout

Function	Pin	Cable Color
Object Voltage Sense +	1	White
Object Voltage Sense -	2	Brown
Object Current Output	3	Green
Object Current Return	4	Yellow
Sink Sense A	5	Grey
Sink Sense B	6	Pink
NC	7	-

Please connect "Current Output" and "Voltage Sense +" together to one side of the thermistor, and "Current Return" and "Voltage Sense –" together to the other side of the thermistor.



## 3.3.2 LDD Sensors Pinout

Fully pre-confectioned cables are available from Meerstetter Engineering at request.

## 3.3.2.1 Part List

Description	Manufacturer	Manufacturer Part Nr.
Connector Solder 4-Way	Binder	99-4909-00-04
Cable 4-Way, Shielded	Kabeltronik	2-LifYCY TP (820400800)

## 3.3.2.2 Pinout

Function	Pin	Cable Color
Temperature Sense A	1	White
Temperature Sense B	2	Brown
Photodiode Cathode	3	Green
Photodiode Anode	4	Yellow

## 3.3.3 AC Mains Supply

The main power connector is a 3-pol Connector for IEC C13 Cables

Symbol	Parameter	Comments	Min	Тур	Max	Units				
Electrical	Electrical Characteristics									
$V_{ACnom}$	Nominal Input Voltage	Single Phase	100		240	V				
V <sub>AC</sub>	Input Voltage	Continuous	90		264	V				
V <sub>ACtrans</sub>	Input Transients	60ms			300	٧				
f <sub>AC</sub>	Input Frequency		47	50/60	63	Hz				
P <sub>IN</sub>	Input Power*	1 - 4 Power Supplies	400		1600*	W				
P <sub>IN110</sub>	Input Power (110V <sub>AC</sub> )	1 - 4 Power Supplies	400		1100	W				
Protection Characteristics										
Fuse	Slow Fuse	Integrated into Connector		10		Α				

<sup>\*</sup> When operated on 110V<sub>AC</sub> mains supply, the max input power is derated to 1100W due to the 10A fuse built into the standard IEC C13 housing. Please contact Meerstetter Engineering if you require an alternative connector.

## 3.4 Error Numbers

Error Numbers 1 to 99 are universal error numbers, which are identically on each device. For all other universal error numbers please refer to the LDD-Family or TEC-Family User Manuals. Error Numbers 100 and above are HMI (LTR)-specific.

#### 3.4.1 RTOS Errors

#	Code	Description	Error Condition, Remedy
80	RTOS_STACKOVERFLOW	One task has a stack overflow	Please contact Meerstetter Engineering
81	RTOS_MALLOCFAIL	Can not allocate memory	Please contact Meerstetter Engineering

## 3.4.2 Routing Errors


#	Code	Description	Error Condition, Remedy
100	ROUTING_LOSTFRAME	The routing task has lost a frame	Lost frame on internal bus
101	COM_TIMEOUT	Communication timeout to an internal device occurred	No answer for 3x100 ms
102	ADDRESS_CONFLICT	Two internal devices use the same address on the bus	Two identically addresses detected

#### 3.4.3 HMI Errors

#	Code	Description	Error Condition, Remedy
110	DEVICE_VERSION	HMI and device firmware versions not compatible	Update all device firmware to the actual version.
111	DEVICE_MISSING	Unassigned rack output terminal detected	Try to reboot the LTR-1200
112	MENU_OWERFLOW	Menu memory overflow	Please contact Meerstetter Engineering
113	UNKNOWN_DEVICE	Unknown internal device recognized	Please contact Meerstetter Engineering

Page 16 (18) <b>5171C</b>	31.07.13 TB 22.10.14 SK	LTR-1200	User Manual	meerstetter engineering
------------------------------	----------------------------	----------	-------------	----------------------------

# 3.5 Physical Dimensions

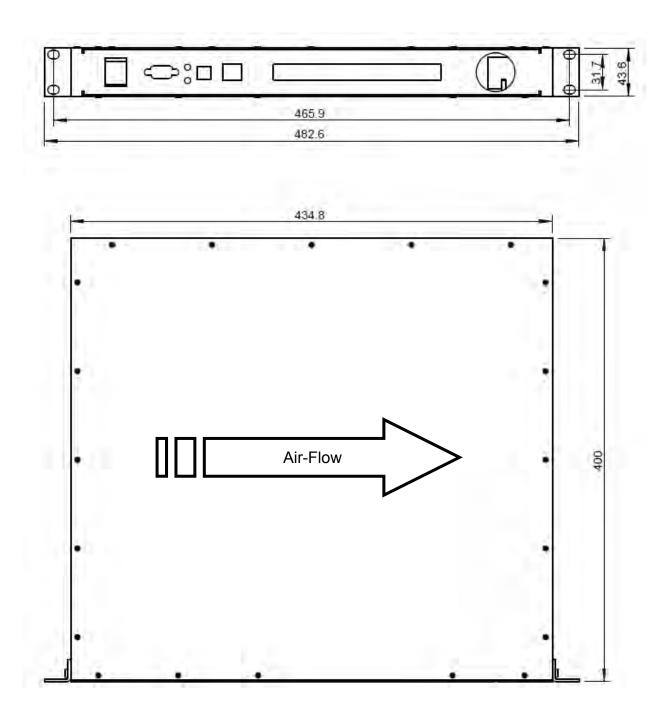

All dimensions are in mm Rack mounting brackets are removable

## 3.6 License Notice

The LTR-1200 Software is built on FreeRTOS (http://www.freertos.org).



4 Quotation Request Form									
Contact Information (Address)			Pleas	Please Describe your Application					
Туре	Senso	r Typ	e	Power	Туре		Sensor Type	e	Power
Output 1					Outp				
☐ TEC	☐ PT′	100	4 Wire			EC	☐ PT100	4 Wire	A
	☐ PT′	1000	2 Wire	V			☐ PT1000	2 Wire	V
	□ NT	C					☐ NTC		
	_	LPC		A		DD			A
			mA				LPC	mA	V
Laser Diode	/ Peltiei	r Modı	ule (Manufa	acturer; Model	Lase	Diode	/ Peltier Modu	ule (Manufac	turer; Model)
Comments /	Special	Requ	irements		Comi	nents /	Special Requ	irements	
	·	·							
Output 3					Outp	ut 4			
☐ TEC	☐ PT′	100	4 Wire	A	☐ TE	EC	☐ PT100	4 Wire	A
	□ PT′	1000	2 Wire	V			☐ PT1000	2 Wire	V
	☐ NT	С					□ NTC		
	☐ No	LPC		A		DD	☐ No LPC		A
		2	mA	V			LPC	mA	V
Laser Diode / Peltier Module (Manufacturer; Model)					Lase	Laser Diode / Peltier Module (Manufacturer; Model)			
Comments /	' Special	l Regu	irements		Com	ments /	Special Requ	irements	
	·	·							
		_							
Special Requirements:									
<ul> <li>More than 4 Outputs are needed (up to 8 TEC outputs are possible)</li> <li>☐ The TEC outputs need to be independent. (If an Error occurs on one output, the others continue)</li> <li>☐ Pre-confectioned Sensor Cables are required. Cable Length:m</li> <li>☐ Third-party devices need to be installed: Please send us more information about this device</li> </ul>									
Page 18	(JQ)	31.	07.13 TB	1.754		1		meerstel	tor a

LTR-1200

5171C

22.10.14 SK

User Manual meerstetter engineering