


User's Guide

Laser Diode Controller Mainframe LDC-3916

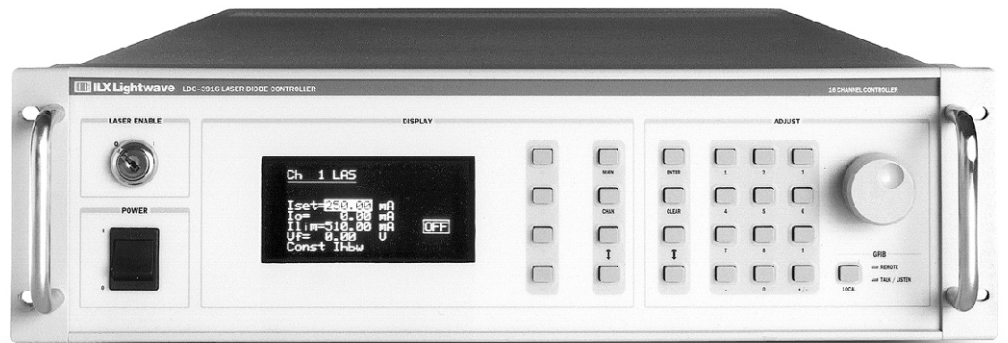

 **ILX Lightwave**
Photonic Test & Measurement Instrumentation

ILX Lightwave Corporation · P. O. Box 6310 · Bozeman, MT, U.S.A. 59771 · U.S. & Canada: **1-800-459-9459** · International Inquiries: 406-586-1244 · Fax 406-586-9405
E-mail: support@ilxlightwave.com

www.ilxlightwave.com

TABLE OF CONTENTS



| | |
|--|-----|
| List of Figures | v |
| List of Tables | vii |
| Safety and Warranty Information | ix |
| Safety Information and the Manual | ix |
| General Safety Considerations | ix |
| Safety Symbols | x |
| Safety Marking Symbols | x |
| Warranty | xi |
| Limitations | xi |
| Returning an Instrument | xi |
| Claims for Shipping Damage | xi |
| Comments, Suggestions, and Problems | xii |

Chapter 1 Introduction

| | |
|---|---|
| Product Overview | 1 |
| Initial Inspection | 1 |
| Installing the LDC-3916 Laser Diode Controller | 2 |
| Grounding Requirements | 2 |
| AC Line Power Requirements | 2 |
| RS-232 Connectors | 2 |
| GPIB Connector | 2 |
| The GPIB Address | 2 |
| Tilt-Foot Adjustment | 3 |
| Rack Mounting | 3 |
| LDC-3916 Orientation | 3 |

Maintenance 4
 Options and Accessories 6

Chapter 2 Operations

Applying Power to Your Laser Diode Controller 7
 The Power On Sequence 7
 The Power On State 8

LDC-3916 Front Panel Controls 9
 Display Controls 9
 Hard Keys 9
 Soft Keys 9
 Adjust Controls 10
 Numeric Keypad 10
 Adjust Knob 10
 Arrow Keys 10

Using the LDC-3916 Menu Structure 11
 Main Menu 11
 Channel Menu 11
 System Configuration 12
 Communications Configuration 12
 Display Configuration 12
 Calibration 13
 Save and Recall 14
 All Channel Menu 15
 Setting All LAS 15
 Setting All TEC 16
 Status Menu 17
 Summary 17

 Modulating the Controller Laser Current Sources 19
 Modulation Setup Example 19

Chapter 3 Operating In Remote Control

GPIB Configuration 21
 Data and Interface Messages 21
 Talkers, Listeners, and Controllers 21
 GPIB Cable Connections 22
 The GPIB Connector 22
 Reading the GPIB Address 23
 Changing the GPIB Address 23

| | |
|---|----------------|
| RS-232 Configuration | 23 |
| Reading the Baud Rate | 23 |
| Changing the Baud Rate | 24 |
| Changing Operation from Local to Remote | 24 |
| GPIB Versus RS-232 Communications | 24 |
| Laser Diode Controller Command Set | 25 |
| Command Syntax | 25 |
| Letters | 25 |
| White Space | 25 |
| Terminators | 26 |
| Command Separators | 26 |
| Parameters | 26 |
| Command Tree Structure | 28 |
| Syntax Summary | 28 |
| IEEE 488.2 Common Commands | 29 |
| LDC-3916 Controller-Specific Commands | 30 |
| Status Reporting | 30 |
| Event and Condition Registers | 30 |
| Operation Complete Definition | 30 |
| Command Timing | 32 |
| Sequential/Overlapped Commands | 32 |
| Query Response Timing | 32 |
| Error Messages | 33 |
| | |
| Chapter 4 Command Reference | |
| LDC-3916 Device-Dependent Commands | 36 |
| Device-Dependent Command Reference | 37 |
| Index | Index-i |

List of Figures



- Figure 1.1** Controller Front View 3
- Figure 1.2** Controller Rear View 4
- Figure 2.1** Initialization Screen 8
- Figure 2.2** Display Controls Screen 9
- Figure 2.3** Adjust Controls 10
- Figure 2.4** Main Menu 11
- Figure 2.5** Channel Menu 11
- Figure 2.6** System Configuration Menu 12
- Figure 2.7** Communications Configuration Menu 12
- Figure 2.8** Display Configuration Menu 13
- Figure 2.9** Calibration Menu 14
- Figure 2.10** Save and Recall Configuration Menu 14
- Figure 2.11** All Channel Menu 15
- Figure 2.12** Setting All LAS menu 16
- Figure 2.13** All TEC Menu page 1 16
- Figure 2.14** All TEC Menu page 2 17
- Figure 2.15** Status Menu 17
- Figure 2.16** Summary Screen 18
- Figure 2.17** Status Screen page 2 18
- Figure 2.18** LDC-3916 Controller Back Panel 19
- Figure 3.1** GPIB Cable Connections 22
- Figure 3.2** GPIB Connector Diagram 23
- Figure 3.3** Command Path Structure 28
- Figure 3.4** Status Reporting Schematic Diagram 31

List of Tables



Table 1.1 General Specifications 5

Table 1.2 Options and Accessories 6

Table 3.1 Substitute Parameter Names 27

Table 3.2 Invalid Syntax Command Strings 29

Table 3.3 Mainframe Error Code Classifications 33

Table 3.4 Mainframe Error Codes 33

Table 4.1 Device-Dependent Commands 36

SAFETY AND WARRANTY INFORMATION



The Safety and Warranty Information section provides details about cautionary symbols used in the manual, safety markings used on the instrument, and information about the Warranty including Customer Service contact information.

Safety Information and the Manual

Throughout this manual, you will see the words *Caution* and *Warning* indicating potentially dangerous or hazardous situations which, if not avoided, could result in death, serious or minor injury, or damage to the product. Specifically:

CAUTION

Caution indicates a potentially hazardous situation which can result in minor or moderate injury or damage to the product or equipment.

WARNING

Warning indicates a potentially dangerous situation which can result in serious injury or death.

WARNING

Visible and/or invisible laser radiation. Avoid direct exposure to the beam.

General Safety Considerations

If any of the following conditions exist, or are even suspected, do not use the instrument until safe operation can be verified by trained service personnel:

- Visible damage
- Severe transport stress
- Prolonged storage under adverse conditions
- Failure to perform intended measurements or functions

If necessary, return the instrument to ILX Lightwave, or authorized local ILX Lightwave distributor, for service or repair to ensure that safety features are maintained (see the contact information on page vi).

All instruments returned to ILX Lightwave are required to have a Return Authorization Number assigned by an official representative of ILX Lightwave Corporation. See Returning an Instrument on page v for more information.

SAFETY SYMBOLS











This section describes the safety symbols and classifications.

Technical specifications including electrical ratings and weight are included within the manual. See the Table of Contents to locate the specifications and other product information. The following classifications are standard across all ILX Lightwave products:

- Indoor use only
- Ordinary Protection: This product is NOT protected against the harmful ingress of moisture.
- Class I Equipment (grounded type)
- Mains supply voltage fluctuations are not to exceed $\pm 10\%$ of the nominal supply voltage.
- Pollution Degree II
- Installation (overvoltage) Category II for transient overvoltages
- Maximum Relative Humidity: $< 80\%$ RH, non-condensing
- Operating temperature range of $0\text{ }^{\circ}\text{C}$ to $40\text{ }^{\circ}\text{C}$
- Storage and transportation temperature of $-40\text{ }^{\circ}\text{C}$ to $70\text{ }^{\circ}\text{C}$
- Maximum altitude: 3000 m (9843 ft)
- This equipment is suitable for continuous operation.

Safety Marking Symbols

This section provides a description of the safety marking symbols that appear on the instrument. These symbols provide information about potentially dangerous situations which can result in death, injury, or damage to the instrument and other components.
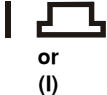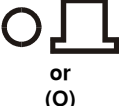
| | | | |
|--|--|---|---|
|  <p>Caution, refer to manual</p> |  <p>Earth ground Terminal</p> |  <p>Alternating current</p> |  <p>Visible and/or invisible laser radiation</p> |
|  <p>Caution, risk of electric shock</p> |  <p>Protective Conductor Terminal</p> |  <p>Caution, hot surface</p> |  <p>Frame or chassis Terminal</p> |
|  <p>On: In position of a bistable push control. The slash (I) only denotes that mains are on.</p> | |  <p>Off: Out position of a bistable push control. The circle (O) only denotes that mains are off.</p> | |

WARRANTY

ILX LIGHTWAVE CORPORATION warrants this instrument to be free from defects in material and workmanship for a period of one year from date of shipment. During the warranty period, ILX will repair or replace the unit, at our option, without charge.

Limitations

This warranty does not apply to fuses, lamps, defects caused by abuse, modifications, or to use of the product for which it was not intended.

This warranty is in lieu of all other warranties, expressed or implied, including any implied warranty of merchantability or fitness for any particular purpose. ILX Lightwave Corporation shall not be liable for any incidental, special, or consequential damages.

If a problem occurs, please contact ILX Lightwave Corporation with the instrument's serial number, and thoroughly describe the nature of the problem.

Returning an Instrument

If an instrument is to be shipped to ILX Lightwave for repair or service, be sure to:

- 1 Obtain a Return Authorization number (RA) from ILX Customer Service.
- 2 Attach a tag to the instrument identifying the owner and indicating the required service or repair. Include the instrument serial number from the rear panel of the instrument.
- 3 Attach the anti-static protective caps that were shipped with the instrument and place the instrument in a protective anti-static bag.
- 4 Place the instrument in the original packing container with at least 3 inches (7.5 cm) of compressible packaging material. **Shipping damage is not covered by this warranty.**
- 5 Secure the packing box with fiber reinforced strapping tape or metal bands.
- 6 Send the instrument, transportation pre-paid, to ILX Lightwave. Clearly write the return authorization number on the outside of the box and on the shipping paperwork. ILX Lightwave recommends you insure the shipment.

If the original shipping container is not available, place your instrument in a container with at least 3 inches (7.5 cm) of compressible packaging material on all sides.

Repairs are made and the instrument returned transportation pre-paid. Repairs are warranted for the remainder of the original warranty or for 90 days, whichever is greater.

Claims for Shipping Damage

When you receive the instrument, inspect it immediately for any damage or shortages on the packing list. If the instrument is damaged, file a claim with the carrier. The factory will supply you with a quotation for estimated costs of repair. You must negotiate and settle with the carrier for the amount of damage.

Comments, Suggestions, and Problems

To ensure that you get the most out of your ILX Lightwave product, we ask that you direct any product operation or service related questions or comments to ILX Lightwave Customer Support. You may contact us in whatever way is most convenient:

Phone (800) 459-9459 or (406) 586-1244

Fax (406) 586-9405

Email support@ilxlightwave.com

Or mail to:

ILX Lightwave Corporation
P. O. Box 6310
Bozeman, Montana, U.S.A 59771
www.ilxlightwave.com

When you contact us, please have the following information:

Model Number: _____

Serial Number: _____

End-user Name: _____

Company: _____

Phone: _____

Fax: _____

Description or sketch of what is connected to the ILX Lightwave instrument:

Description of the problem:

If ILX Lightwave determines that a return to the factory is necessary, you are issued a Return Authorization (RA) number. Please mark this number on the outside of the shipping box.

You or your shipping service are responsible for any shipping damage when returning the instrument to ILX Lightwave; ILX recommends you insure the shipment. If the original shipping container is not available, place your instrument in a container with at least 3 inches (7.5cm) of compressible packaging material on all sides.

We look forward to serving you even better in the future!

INTRODUCTION

This chapter is an introduction to the LDC-3916 Laser Diode Controller. It contains unpacking information, instructions on how to install and apply power, and safety considerations. It also contains some maintenance information, specifications, and a list of options and accessories.

Product Overview

The LDC-3916 Laser Diode Controller is an instrument that holds up to 16 modules for controlling laser diode current and temperature. The current source modules provide high stability output with fully redundant current limits and multiple laser protection features. The temperature controller modules are compatible with most temperature sensors and TE modules to deliver precise laser temperature control over a wide range of temperatures. The LDC-3916's fast, sophisticated GPIB option lets you automate your experiment or test system.

Initial Inspection

When you receive your LDC-3916 Controller, verify that the following items were shipped with the instrument:

- LDC-3916 Laser Diode Controller
- LDC-3916 Mainframe Instruction Manual
- Power Cord

Note: When unpacking the instrument, be sure to save the packaging and the protective ESD caps on the rear of the instrument in case you have to return the instrument to ILX Lightwave or ship it elsewhere. Shipping damage is not covered under the standard instrument warranty.

Installing the LDC-3916 Laser Diode Controller

This section provides information about the necessary requirements to install the LDC-3916 and how to begin operating the instrument.

Grounding Requirements

The LDC-3916 Laser Diode Controller comes with a three-conductor AC power cable. The power cable must either be plugged into an approved three-contact electrical outlet or used with a three-contact to two-contact adaptor with the grounding wire connected to an electrical ground (safety ground). The LDC-3916's power jack and supplied power cable meet IEC safety standards.

AC Line Power Requirements

You can operate the LDC-3916 Controller from a single-phase power source delivering nominal line voltages of 120 VAC (60 Hz only); 220, 230-240 VAC (all values RMS), at 50/60 Hz. The line power voltage can vary $\pm 10\%$. Maximum power consumption is 1440 Volt-Amps with 16 modules (LDC-3916376 1.5A/9W Controller modules). The instrument's operational voltage is factory configurable and need not be changed before operating the instrument.



WARNING

Before connecting the LDC-3916 to an AC power source, verify that the power source matches the voltage setting printed on the power entry module.

To avoid electrical shock hazard, connect the instrument only to properly earth-grounded, three-prong receptacles. Failure to observe this precaution can result in severe injury or death.

RS-232 Connectors

The RS-232 interface consists of two 9-pin, D-sub connectors, located on the rear panel. The A connector is used to connect to the host computer with a standard straight-through cable (see Figure 1.2 on page 4). The B connector is not enabled at this time.

GPIB Connector

The GPIB interface connector is located on the rear panel, directly to the left of the power input module. See Figure 1.2 on page 4. Attach the GPIB cable to the 24-pin interface connector, which is tapered to ensure proper orientation. Finger tighten the two screws on the cable connector.

A total of 15 devices can be connected together on the same GPIB interface bus. The cables have single male/female connectors on each end so that several cables can be stacked. This permits more than one cable to be attached to any one device. However, the maximum length of the GPIB cables must not exceed 20 meters (65 feet) total, or 2 meters (6.5 feet) per device.

The GPIB Address

The talk and listen addresses on the LDC-3916 Laser Diode Controller are identical. The controller comes from the factory configured with the GPIB address set to 1. You can change the LDC-3916's

GPIO address locally (via the front panel). A procedure for changing the address can be found in Changing the GPIO Address on page 23.

Tilt-Foot Adjustment

The LDC 3916 Laser Diode Controller comes standard with folding front legs and two rear feet for use as a benchtop instrument. The front panel vacuum Fluorescent display may be easier to read if you extend the front legs so that the instrument front panel tilts upward. Simply place the unit on a stable base and rotate the front legs downward until they lock into position.

Rack Mounting

The LDC 3916 can be mounted in a standard 19-inch rack with two available Rack Mounting Kits. These kits contain instrument support brackets which fasten to the inside of your rack enclosure to support your LDC-3916 along each side at the bottom of the instrument. There are two kits available as mentioned above. Kit number RM-137 is for rack enclosures 24 inches in depth. RM-138 is for rack enclosures 30 or 36 inches in depth. Each kit comes with the necessary hardware, including fasteners and instructions for their use.

LDC-3916 Orientation

Now that the LDC-3916 Laser Diode Controller is installed and ready for use, you are ready to learn about its operation. Figure 1.1 and Figure 1.2 show front and rear views of the instrument. The figures identify such items as functional keypad groupings, rear panel connectors, and switches. Use these figures to familiarize yourself with your new controller. Please refer to Chapter 2, Operations for operating fundamentals of your controller.

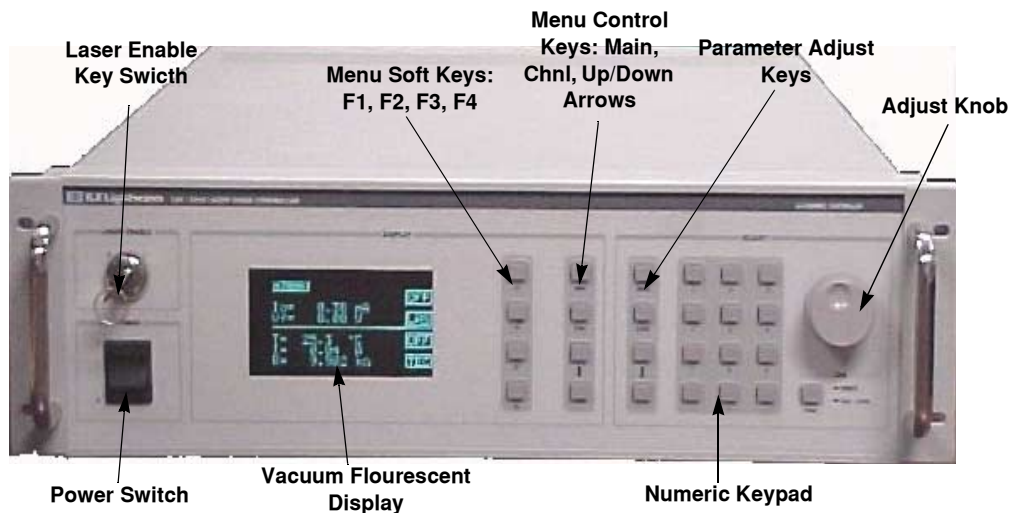


Figure 1.1 Controller Front View

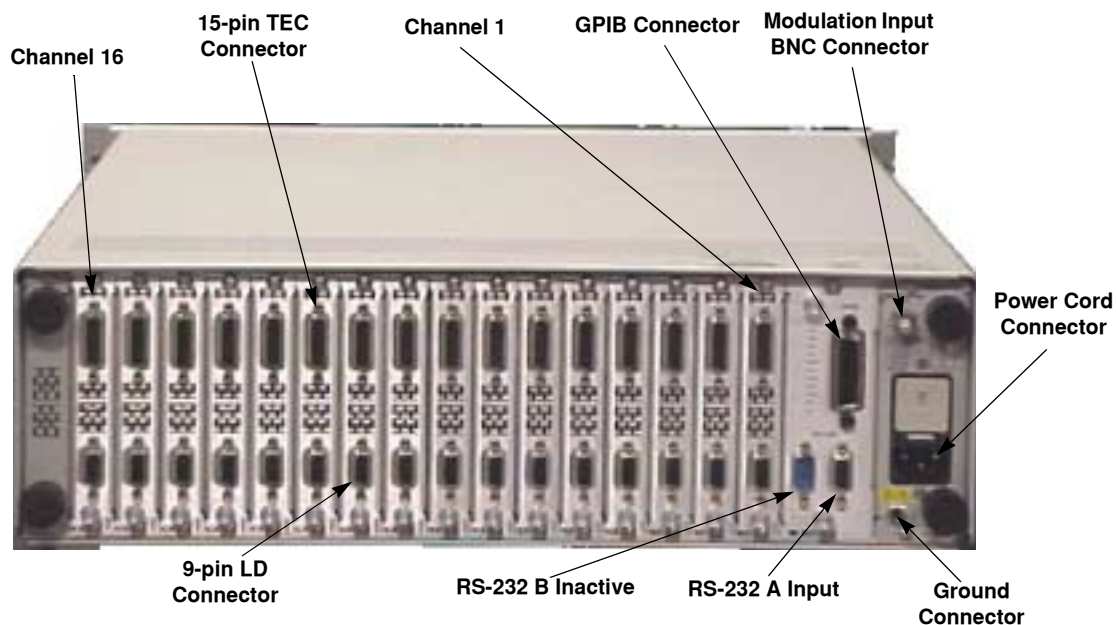


Figure 1.2 Controller Rear View

WARNING

Potentially lethal voltages exist within the LDC-3916 Laser Diode Controller. To avoid electric shock, do not perform any maintenance on the instrument unless you are qualified to do so. Qualified service personnel are required to wear protective eyewear and anti-static wrist bands while working on the LDC-3916 Laser Diode Controller circuit boards. High voltages are present on and around the Controller's printed circuit boards.

There are no user serviceable parts in the instrument. Contact ILX Customer Service (see Comments, Suggestions, and Problems on page xiv for contact information) for information about servicing the instrument.

Table 1.1 General Specifications

| Specification | Description |
|-------------------------------|--|
| Connectors | |
| External Modulation Connector | BNC, instrumentation amplifier input |
| RS-232 Interface | |
| Input | 9-pin, D-connector, female |
| Output | 9-pin, D-connector, male (INACTIVE) |
| GPIB Interface | Meets ANSI/IEEE Std 488.1-1987 Meets ANSI/IEEE Std 488.2-1987 |
| General | |
| Size (H x W x D) | 5.25" x 17" x 24" (133mm x 431mm x 609mm) |
| Weight | 76.0 lbs (34.4 kg), approx. |
| Power Requirements | 120 VAC at 60Hz, 220 VAC at 50/60 Hz, 230-240 VAC at 50/60Hz |
| Temperature | 0 to +40 °C operating; -40 to +70 °C storage |
| Humidity | < 90% relative humidity, non-condensing. |
| Display type | Vacuum Fluorescent Display (VFD) |

Options and Accessories

Options and accessories available for the LDC-3916 Laser Diode Controller include the following:

Table 1.2 Options and Accessories

| DESCRIPTION | MODEL NUMBER |
|---|---------------|
| Rack Mount Kit for 24" deep racks, 20.5" support | RM-137 |
| Rack Mount Kit for 30" and 36" deep racks, 25" support (enables installation into a standard 19 inch wide rack) | RM-138 |
| 16-Channel Butterfly Mount Tray | LDM-4616 |
| DIL Laser Diode Mount Module for LDM-4616 | LDM-4604/xDIL |
| Temperature Controlled Laser Diode Mount | LDM-4407 |
| DIL Laser Diode Mount | LDM-4982 |
| Butterfly Laser Diode Mount | LDM-4894 |
| High Frequency Butterfly Package LD Mount | LDM-4894RF |
| Temperature Controlled Laser Diode Mount | LDM-4412 |
| Current Source Interconnect Cable (unterminated) | CC-306S |
| Current Source Interconnect Cable (terminated) | CC-305S |
| TEC Interconnect Cable (unterminated) | CC-501S |
| TEC Interconnect Cable (terminated) | CC-505S |
| Calibrated 10 k Ω Thermistor | TS-510 |
| Uncalibrated 10 k Ω Thermistor | TS-520 |

Other Laser Diode Mounts and Thermistor models are available. Please contact ILX Lightwave for information on additional options for your applications.

OPERATIONS

This chapter introduces you to the operation of the LDC-3916 sixteen-channel laser diode controller. It offers instructions for connecting your laser to the current source and temperature controller modules and describes powering up the instrument. The chapter also provides a description of the front panel controls, including both display and adjust controls.

The bulk of the chapter provides a description of the LDC-3916 Menu Structure. This section supplies pictures of the display screen associated with each menu for the LDC-3916 Mainframe related to general operation of the instrument. This section also provides instructions on how to select each menu and how to perform the operations relevant to the menu selected.

Applying Power to Your Laser Diode Controller

To turn on the LDC-3916, push the button in the Power section of the front panel to change the setting from zero (0) to one (1). This action will initiate the Power-on sequence. If the LDC-3916 does not appear to turn on, verify that it is connected to line power. If line power is not the problem, remove the power cord and check the line power fuse.

The Power On Sequence

When power is applied to the LDC-3916, the following takes place: for about six seconds the initialization screen is displayed, showing the company name and logo, the name of instrument, and firmware version (in the lower left-hand corner of the screen). During this time, a self test is performed to ensure that the mainframe processor is communicating with the processor(s) of any module(s) connected to the mainframe and identifying which module model is present. After this

test, the instrument is ready to operate and is configured to the state it was in when the power was last shut off.



Figure 2.1 Initialization Screen

The Power On State

The instrument is configured to the state it was in when power was last shut off and according to the type of module in each bay (either a 500 mA or 1A combination module). You can choose to clear the last saved instrument state by recalling the default values. These values are stored in BINS which you can use to save or recall instrument configurations (described in more detail later in this chapter). BIN 0 contains all of the default configurations. The default configuration information for each module is found in the each module instruction manual.

Note: If the instrument cannot successfully complete the power on test, that is, cannot identify a module or modules inserted into the mainframe, that module or modules will not be identified in the Status Screen. Power down the instrument and check to see if the modules are correctly seated and fastened to the mainframe. If you continue to experience power up problems, power down the instrument and contact an ILX Lightwave Customer Service Representative.

LDC-3916 Front Panel Controls

All key operating parameters for the LAS (laser) and TEC modules can be set, adjusted, and displayed through established menus. (See the respective module manual for further information on each module.)

Display Controls

All key operating parameters for the LAS (laser) and TEC modules can be set, adjusted, and displayed through established menus. (See the respective module manual for further information on each module.) The menus on the display are controlled by using the keys (pushbuttons) to the right of the display box. There are two kinds of keys, the "hard" keys and "soft" keys. The hard keys have only one function, while the function of the soft keys varies with each menu on the display.



Figure 2.2 Display Controls Screen

Hard Keys

The menu structure is initiated using one of the primary Menu Control keys. These keys provide direct access to the Main and Channel menus as well as movement within the screens used most often for instrument control. They are located in the second column to the right of the display window. They are labeled (from top to bottom): MAIN (for Main Menu), CHNL (Channel), Up Arrow, and Down Arrow. Depressing the Main key provides direct access to the Main Instrument screen. The Chnl key provides direct access to the Channel screen, where the instrument will display channel information on setpoints for the las and TEC modules. The Chnl key also allows user access to complete las/tec configuration screens. The Up and Down Arrow keys in this section move the screen cursor around the screen to select operating parameters only.

Soft Keys

The four keys closest to the display window are used as soft keys. They perform menu-specific functions within each menu. When you have accessed a menu, the soft key identification for this menu will appear on the right-hand side of the display, next to the corresponding pushbutton. Soft keys may be used to initiate another menu or to change/edit a parameter. For example, in the LAS section of the Chnl menu, the word "On" designates the state of the output. Depressing the associated soft key will change the state from On to Off. If the LAS soft key is depressed, the laser setup menu will be displayed. (Full descriptions of each menu are provided later in this chapter.)

Adjust Controls

The Adjust section of the front panel provides various means of entering or modifying instrument parameters. These include a "10-key" numeric keypad, a rotary knob (digital encoder), and Up/Down Arrow keys.



Figure 2.3 Adjust Controls

Numeric Keypad

The numeric keypad provides direct entry of values for set-points and numeric data. When an editable field is highlighted or selected from the menu screens, the desired value can be typed into the keypad and then accepted by pressing the Enter key. If the value entered is in error, the Clear key can be used to reset the field to its previous value. The keypad supports decimal entry as well as negative values for some constants and temperature set-points.

Adjust Knob

When the cursor in a menu is positioned on a parameter which can be adjusted, the Adjust Knob can be used to increase or decrease the parameter values. When the Adjust Knob is turned, the new values are updated automatically. The Adjust Knob input may be disabled under the System Configuration menu.

Arrow Keys

The two Adjust Up/Down Arrow keys also can be used to adjust values on any of the screens where a numeric value is required. Holding down either of the keys will increase or decrease the number via a simple time-based acceleration algorithm. When the Arrow keys are pressed, the new values are updated automatically.

Using the LDC-3916 Menu Structure

This section describes the menus, how they are structured, and how to navigate through them.

Main Menu

Once you have pressed the Main key, the following screen appears. This is the primary set-up and configuration screen for the instrument. Pressing the soft keys to the right of the display leads to Channel selection, System configuration, All Channel control features, and system Status displays. It also allows a soft key path directly back to the Channel menu.

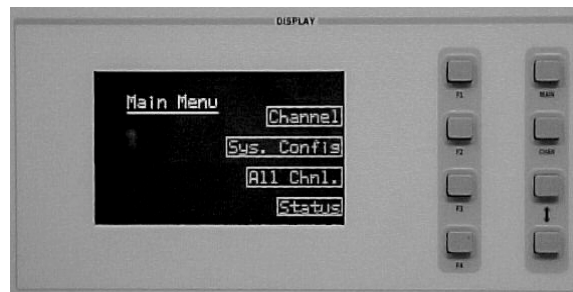


Figure 2.4 Main Menu

Channel Menu

Pressing the Chnl key allows you to jump directly to the default Channel menu. Shown here is the Channel display for a typical combination (LAS and TEC) module. The Channel menu provides standard user information, along with soft-key assignments for configuring the module further or for turning the output On/Off. Initially, the cursor waits at the channel number indicator. The channel number can be changed either by entering the desired channel number from the keypad, rotating the Adjust Knob, or by using the Up/Down Arrow keys in the Adjust section of the front panel. Pressing the Enter key causes the display to change to the selected channel. Pressing the LAS or TEC soft key calls up the menu for editing Laser or TEC control parameters for each of active modules. For further information on this procedure, see the LDC-3916370 Series Controller Module Manual. The output state for each module can be changed by depressing the associated soft key Off or On, which is accompanied by an audible beep (if configured). When either output is on, the display will indicate measured laser output current and forward voltage and measured temperature, thermoelectric module current, and sensor resistance.



Figure 2.5 Channel Menu

System Configuration

The System Configuration menu is accessed from the Main menu. Pressing the appropriate soft key provides access to:

- Comm. (Communications Configuration) menu for GPIB and RS-232 setup
- Display Config. (Display Configuration) menu for interface settings
- Cal. (Calibration) menu for module calibration
- Sav/Rec (Save/Recall) menu for system-wide parameter storage and retrieval



Figure 2.6 System Configuration Menu

Communications Configuration

If you intend to operate your LDC-3916 LD Controller remotely via GPIB (General Purpose Information Bus) or through a serial RS-232 link, selecting Comm from the System Configuration menu accesses the Config. Comm. menu. Here you can view and change the GPIB address and the RS-232 BAUD rate. Pressing the Up Arrow soft key returns you to the Sys. Config. menu. Chapter 3 in both the Mainframe and Module manuals provides complete information on remote control operation.



Figure 2.7 Communications Configuration Menu

Display Configuration

If you intend to operate your LDC-3916 LD Controller remotely via GPIB (General Purpose Information Bus) or through a serial RS-232 link, selecting Comm from the System Configuration menu accesses the Config. Comm. menu. Here you can view and change the GPIB address and the RS-232 BAUD rate. Pressing the Up Arrow soft key returns you to the Sys. Config. menu. Chapter 3

in both the Mainframe and Module manuals provides complete information on remote control operation.



Figure 2.8 Display Configuration Menu

Selecting Display from the System Configuration menu accesses the Display Config. menu. Here, you can adjust the display brightness, initiate a display self-test, enable or disable an audible beep whenever pushbuttons are pressed, and enable or disable the Adjust Knob. Use the Display Up/Down keys to select the desired function, which will be highlighted. Pressing the soft key to the right of the Arrow shown in the display window returns you to the previous menu.

You can adjust the display brightness in four levels. A bar graph will be displayed next to the Bright enunciator. One, two, three or no sections of the bar graph will be back lit, indicating the level of display brightness. You can adjust the brightness by either rotating the Adjust Knob or depressing the Adjust Up/Down Arrow keys in the section. Display brightness increases from right to left. Each step increases the brightness 12.5% from minimum to maximum brightness.

If there is a problem with the graphic display, a display self-test can be initiated from this menu. After selecting the Display Test function using the hard keys, use either the Adjust Knob or the Adjust Up/Down Arrow keys to display the word, "Yes". Press **Adjust Enter** in the section to activate the test. The display will be instructed to light up all pixels. You can perform a visual inspection of the display to ensure that all of the pixels are illuminated. You should see a rectangular grid. If you find a display problem, contact the Customer Service Department of ILX Lightwave (See Comments, Suggestions, and Problems on page xii., for more information.). Pressing the Main or Chnl keys will return you to those specific menus. Pressing any other key returns you to the previous menu.

The Audible beep function allows you to enable or disable an audible "beep" tone heard when any key (either hard key or soft key) is pressed. The On or Off enunciator (depending on the current state of this function) will be highlighted when selected. Use the Adjust Knob or Adjust Up/Down Arrow keys to change from off to on or on to off. You must press Adjust Enter after making the desired selection to execute the change.

The Adjust Knob also can be enabled or disabled from this menu. Once the Lockout dial function is selected, the On or Off enunciator will be highlighted (depending on the current state of this function). Use the Adjust Knob or Adjust Up/Down Arrow keys to change from off to on or on to off. Press **Adjust Enter** after making the desired selection to execute the change.

Calibration

The Calibration Menu allows you to calibrate from the front panel all Laser and TEC functions for each of the modules (16 max.) you have loaded in the LDC-3916 Mainframe. Remote calibration through the IEEE488.2 GPIB or serial RS-232 interface is provided as well. (See Chapter 3.) ILX Lightwave recommends that the instrument be calibrated every 12 months, or whenever

performance verification indicates that calibration is necessary (such as any difference between the displayed Laser current and the actual laser current which exceeds the specified value). Calibrate the instrument under laboratory conditions. We recommend calibration at 23° C ± 1.0° C. When necessary, however, the LDC-3916 Laser Diode Controller may be calibrated at its intended use temperature (if this is within the specified operating temperature range of 0 to 40° C). For specific calibration information see the Service Reference section of your LDC-3916372 or LDC-3916374 module instruction manual.



Figure 2.9 Calibration Menu

Save and Recall

The Save and Recall feature is useful for applications in which you may need to alternate between particular instrument configurations. The Save feature allows you to store easily all front panel settings for any given configuration. These settings, which are stored in one of ten memory bins, can be retrieved at any time with the Recall function. This saves setup time, and it reduces the chance of setup error for tests which are repeated periodically. See the relevant module manual for information on instrument configuration setup.

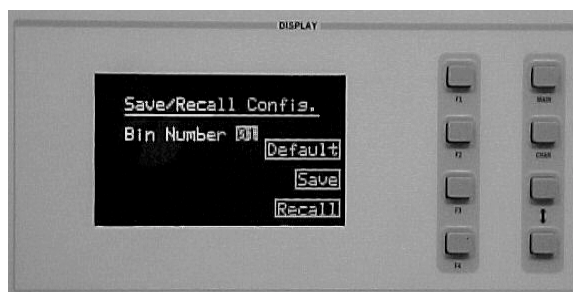


Figure 2.10 Save and Recall Configuration Menu

To access the Save/Recall Config. menu, select Sav/Rec from the System Configuration menu. To save an instrument setup, select the desired bin number (your choice of #1-10) by rotating the Knob or using the Adjust Up/Down Arrow keys. Then press the Save soft key.

The instrument will save/recall up to 16 channel settings in a bin location. Each channel can be configured differently and saved/recalled into/from a bin for future use. Remember a module must be present within the mainframe in order for the mainframe to save the settings.

To recall an instrument setup, select the desired bin number as above and press the Recall soft key. To restore the instrument default settings from the factory, simply press the Default soft key. Bin 0 contains the factory default settings.

Note: A checksum from each module is used to ensure that the recalled setup matches the user's expectation (in case a module was changed or fails to restore properly). A warning will be displayed if a checksum error is found.

The default setting may be retrieved by entering the Default display. See Chapter 3, Operating In Remote Control for remote execution of the Save and Recall functions.

All Channel Menu

The All Channel menu offers a unique and quick way to set up all 16 channels of the instrument (or any number of channels from 2 to 16) simultaneously. Once all the modules are set up, all of the lasers and all of the TECs may be turned on simultaneously by pressing the On soft key. All of the modules must be the same model number for this feature to operate; for example, all 500 mA laser drive modules (model LDC-3916372) or all 1A laser drive modules (model LDC-3916374).



Figure 2.11 All Channel Menu

For example, suppose you have an LDC-3916 with sixteen LDC-3916372 modules, and you wish to operate sixteen lasers in low bandwidth mode at 75 mA with a limit of 80 mA and a Vlim of 3.1V at 25 °C with a temperature limit of 40 °C and a gain of 30 in the 100 μ A sensor range (for measuring temperatures between 10 °C and 50 °C). Within this menu you would do the following:

Setting All LAS

From the All Channel menu, select Set LAS with the appropriate soft key. This will display the All LAS Set p.1 menu. Use the Display Up/Down Arrow keys to select Iset, which will be highlighted when selected. Next, program in the desired current set point using the Adjust Knob, keypad, or Adjust Up/Down Arrow keys to enter 75.00 mA. Use the Display Up/Down Arrow keys to arrow down to Ilim. Set the current limit to 80 mA as described above. Arrow down to Vlim, and set the laser protection forward voltage limit to 3.1V. Again arrow down to Mode and, using the Adjust Knob or Adjust Up/Down Arrow keys, select llbw (for Low bandwidth mode, i.e. lowest noise mode). When

the desired fields are set correctly, turn on all 16 channel outputs with the On soft key. Use the Up Arrow soft key to return to the All Channel menu.



Figure 2.12 Setting All LAS menu

Setting All TEC

Select SET TEC with the appropriate soft key. This will display the All TEC Set p. 1 menu. As above set the Tset temperature to 25° C. Arrow down to Tlim, and set the temperature limit to 40 °C. Next set the mode to T for constant temperature mode by arrowing down to the Mode field and setting it as described above.

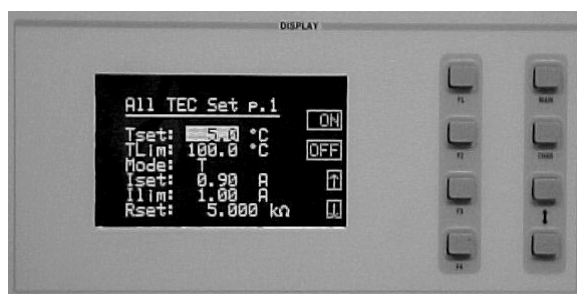


Figure 2.13 All TEC Menu page 1

To set the gain, sensor range, and sensor (thermistor) constants, press the Down Arrow soft key to display the All TEC Set p.2 menu. Highlight Gain with the Adjust Knob or Display Up/Down Arrow keys and set the gain to 30 with the Adjust keypad, Adjust Knob or Adjust Up/Down Arrow keys. Arrow down to the Sensor field and change the field to 100 uA. Check for the proper sensor constant values and adjust if necessary. When the desired fields are set correctly, use the Display Up Arrow

soft key to get back to the All TEC p.1 menu and turn on all 16 channel outputs with the On soft key. Now all channels are controlling the temperature of your laser to 25 °C.



Figure 2.14 All TEC Menu page 2

Status Menu

The Status menu provides summary information on individual module status. There are two status pages to choose from. The Summary status page lists all channels, up to sixteen, present in the mainframe and the condition of the output on a single screen. The Status page lists four channels at a time, up to a total of sixteen. This page indicates the LAS measured current, the TEC measured temperature, if the either of the outputs is active (LAS/TEC), and any errors respective to a channel. The Up Arrow returns you to the Main menu.

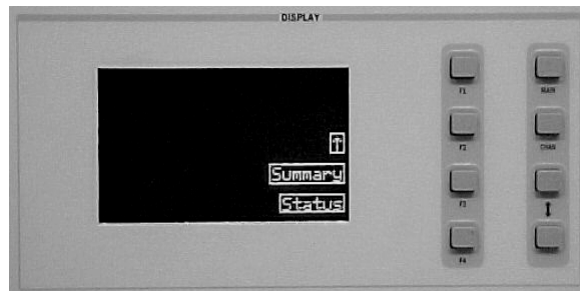


Figure 2.15 Status Menu

Summary

Pressing the Summary soft key while in the Status menu displays the Summary page. Next to each channel number are the words LAS and TEC (if you have 3916370 Series Modules installed). If the

text is highlighted, the output is on for that respective channel. Blanks indicate that there is no module present in that slot.

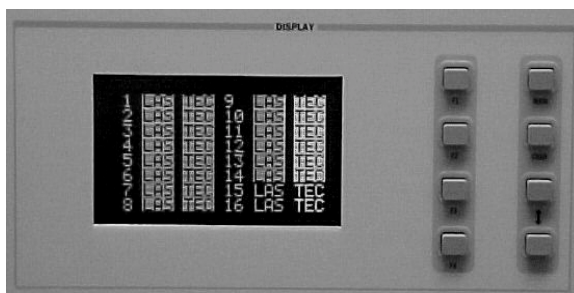


Figure 2.16 Summary Screen

Pressing the Status soft key while in the Status menu displays the Status page. This page provides the user with instant access to multiple channel status information as outlined above. With the Display Up/Down Arrow keys, you can scroll one channel at a time through all of the modules loaded in the mainframe. The laser setpoint and TEC setpoint can be changed from this page. The mode of operation of the laser and the TEC determines which setpoint adjustments can be made. Press the top soft key (F1) once and the top line will highlight, changing from the laser measurement to the laser setpoint. Adjust the setpoint with either the Adjust Knob or the numeric keypad. Press the top soft key a second time and the second line will change from the TEC measurement to the TEC setpoint. Adjust the setpoint as before. Press the top soft key a third time and the laser output may be turned on by turning the Adjust Knob or by pressing Up/Down Arrow keys nearest the numeric keypad. Press the soft key again and the TEC can be turned on by using the Adjust Knob or Up/Down Arrow keys. When all adjustments are complete, press the soft key a final time. Soft keys F2, F3 and F4 similarly work the same for the second, third and fourth channels displayed.



Figure 2.17 Status Screen page 2

The default measurements on the status menu are laser current on the first line and TE temperature on the second line. These two lines may be configured to display any laser or TEC measurement by sending a GPIB command. For example, send the command `STATMENU:LINE2:IPD` and the status menu will display the photo diode monitor current on the second line as well as the laser diode current on the first line. See your module instruction manual for more information.

To exit either the Summary or Status page, use the Main or Chnl key, depending on your next action.

Modulating the Controller Laser Current Sources

The LDC-3916 Laser Diode Controller allows a modulated signal to be superimposed on the Laser current of any or all current source modules. The Modulation connector (BNC) on the back panel is the input for the modulated signal. This input is terminated into 50W.



Figure 2.18 LDC-3916 Controller Back Panel

Each module uses an instrumentation amplifier to buffer the modulation signal. This signal may be applied to more than one module (channel) at a time. The transfer function (mA/V) varies by model and laser drive current output range. Typically it is mA (full scale) / 10 V.

Laser protection is assured, even while modulating, via the limit current parameter set on each individual module. Refer to the appropriate module manual for details on limit current settings and laser diode protection.

The allowable bandwidth of the modulated signal, defined as the 3 dB roll-off point, is dependent on the current source module used, the Laser current range, and the Laser mode (constant current, low/high bandwidth). See the laser current source specifications in the appropriate module instruction manual for external analog modulation bandwidth specifications.

Modulation Setup Example

For example, assume you are using an LED that must be operated in constant current of 50 mA with a modulated injection current from 3 to 30 kHz. The experiment requires an LDC-3916372 laser controller module to be configured for high bandwidth mode with a limit of 175 mA.

Set the LDC-3916372 module in Constant Current High Bandwidth Mode by selecting IHBW in the LAS menu on the front panel. Set the current to 50 mA and set the current limit for the LDC-3916372 as desired. Enable modulation by selecting **On** for the Modulation selection in the LAS p.3 (laser page 3) menu. Now you are ready to modulate the laser current.

From the LAS menu, press the Off soft key to toggle the laser current output on. The soft key indicator will change to On. To turn the output off, press the On soft key to toggle it Off again.

Note: If the modulation signal attempts to drive the output above the LAS ILIM (laser current limit) setting, the output will be clipped at the ILIM value.

OPERATING IN REMOTE CONTROL

GPIB (General Purpose Interface Bus) is the common name for *ANSI/IEEE Standard 488.2 1987*, an industry standard for interconnecting test instruments in a system. Everything you can do from the front panel can also be done remotely, and in some cases, with more flexibility. For instance, in remote mode you have access to commands for functions not found on the front panel. The following sections show you the fundamentals of operating your LDC-3916 Laser Diode Controller remotely through the GPIB and RS-232 interfaces.

GPIB Configuration

Before you can operate the LDC-3916 from a remote location with GPIB, you need to know its GPIB address. The following sections describe reading and changing the GPIB address of the LDC-3916.

Data and Interface Messages

GPIB devices communicate with each other by sending data and interface messages. Data contains device-specific information such as programming instructions, measurement results, and instrument status. Each device has an address number, and ignores all data traffic not addressed to it. Depending on its content, data is often called a "device dependent message" or a "device dependent command". Interface messages manage the bus, with functions such as initializing the bus and addressing or unaddressing devices. In addition, some individual bus lines are designated for this purpose.

Talkers, Listeners, and Controllers

Every GPIB system consists of one or more "talkers" and "listeners", and often at least one "controller". Talkers supply data. Listeners accept data. A system can consist of simply a talker and listener, for example a meter connected to a datalogger or chart recorder. Controllers designate talkers and listeners. A controller is necessary when the active talkers or listeners must be changed. When the controller is a computer, it often also designates itself as a listener so it can collect data from designated talkers.

If there is more than one controller, only one can be the Controller In Charge (CIC). Control can be passed from one controller to another. In a multiple controller system, there can be one "System Controller" capable of asserting control (becoming CIC).

GPIB Cable Connections

Standard GPIB connectors can be connected together (stacked), allowing you to configure the system linearly, or in a star configuration.

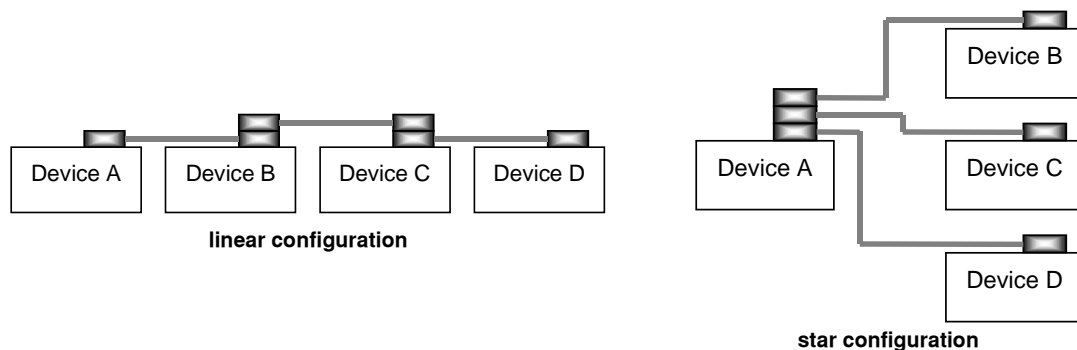


Figure 3.1 GPIB Cable Connections

The GPIB Connector

The standard GPIB connector consists of 16 signal lines in a 24-pin stackable connector. The extra pins are used for some twisted-pair wires. There are eight data input/output (I/O) lines, three handshake lines, and five interface management lines.

Eight data input/output (DIO) lines carry both data (including device dependent commands) and interface messages. The ATN interface management line determines whether these lines contain data or interface messages.

Three handshake lines ensure that all data and messages are reliably transferred:

- NRFD (not ready for data) indicates whether a device can receive the next byte of data or message.
- NDAC (not data accepted) indicates whether a receiving device has accepted a byte of data or message.
- DAV (data valid) indicates that the signal levels on the data lines are stable and available for the receiving device(s) to accept.

Five interface management lines control the flow of information:

- ATN (attention) is set by the controller in charge to define the I/O lines for data or interface messages.
- IFC (interface clear) is set by the system controller to initialize the bus and assert itself as controller in charge.
- REN (remote enable) is set by the controller to place addressed devices into remote or local (front panel) control mode.
- SRQ (service request) can be set by any device in the system to request service from the controller.

- EOI (end or identify) is used by talkers to identify the end of a message.

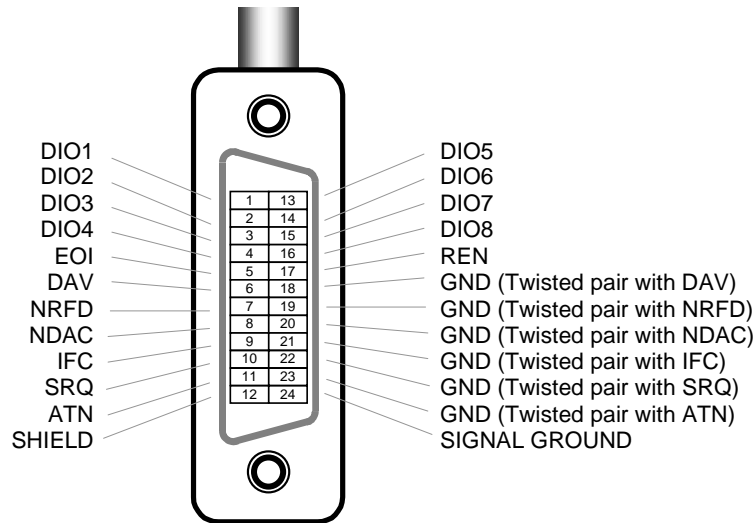


Figure 3.2 GPIB Connector Diagram

Reading the GPIB Address

Press the Main key on the front panel to recall the Main Menu. Then press the Sys. Config soft key, to reach the System Config. menu. Next, press the Comm. soft key to access the Config. Comm. menu. The instrument will display the GPIB Address there.

Changing the GPIB Address

Every device on the GPIB bus must have a unique address. The default address from the factory is address "01". If it is necessary to change the address, select the GPIB Address field of the Config. Comm. menu. Turn the Adjust Knob until the desired address value is displayed. The new GPIB address will then be stored in non-volatile memory. The allowable address range is 0-30 for primary GPIB addressing. Extended GPIB addressing is not implemented on the LDC-3916 Laser Diode Controller at this time.

RS-232 Configuration

The instrument's baud rate setting must match the baud rate used by the serial RS-232 interface, which is typically a serial COMM port on your PC. This section describes reading and changing the baud rate of the LDC-3916.

The LDC-3916's RS-232 is configured for 8-bit, no parity. This is not adjustable. Only the baud rate may be altered.

Reading the Baud Rate

Press the Main key on the front panel to recall the Main Menu. Then press the Sys. Config. soft key, to reach the System Config. menu. Next, press the Comm. soft key to access the Config Comm. menu. The instrument will display the baud rate there.

Changing the Baud Rate

The factory default baud rate is 19200. If it is necessary to change the baud rate, select the Baud rate field of the Config. Comm. menu. Turn the Adjust Knob until the desired baud rate value is displayed. The new baud rate will then be stored in non-volatile memory. The allowable baud rates are 1200, 2400, 4800, 9600, and 19200. Refer to the serial port configuration of your PC (if used) for the appropriate baud rate.

Changing Operation from Local to Remote

Sending a command over the GPIB or RS-232 interface will automatically put the instrument in REMOTE mode. The REMOTE indicator on the lower right of the front panel will illuminate when the controller is in remote operation mode. When the instrument is in REMOTE mode, pressing the LOCAL switch on the front panel returns the instrument to LOCAL control mode unless the Local Lockout state has been activated by the host computer (GPIB only). Local Lockout disables all LDC-3916 front panel switches until this condition is changed by the host computer. Menu changes are allowed by using the soft keys in Remote mode. Changing channels is allowed by using the Adjust Knob or Arrow keys. Other items in menus such as setpoint adjustments, mode changes, cursor movements or turning the TEC/laser on or off are not allowed.

The TALK/LISTEN indicator on the front panel is illuminated when the instrument is communicating over the GPIB or RS-232 interface.

GPIB Versus RS-232 Communications

The LDC-3916 should not be run remotely via GPIB and RS-232 at the same time. When using the RS-232 interface, the remote GPIB command set is fully operable. Command syntax does not vary between GPIB and RS-232 usage. However, the commands which affect GPIB hardware operation will not be useful. For example, the user could send the "**SRE" command via RS-232. However, any service request (SRQ) via GPIB would not be visible since RS-232 has no hardware to support it. This is because SRQ is a function of the GPIB interface hardware and is not available via RS-232.

Laser Diode Controller Command Set

This section contains information about the LDC-3916's mainframe command set, command syntax, and error and status registers. For the most efficient and effective remote control of your controller, we recommend you study the following sections. For module-specific commands, refer to the GPIB section of the instruction manual for that module.

Command Syntax

This section describes command syntax and structure. You need this information to effectively write GPIB control programs. The syntax of GPIB commands follow the rules defined in the ANSI/IEEE 488.2-1987 standard.

Letters

Any GPIB command or query must contain all of the letters which are shown in upper case in the command definition. Some of the device dependent commands include additional optional letters shown in lower case in the command reference (Chapter 4, Command Reference). Upper/lower case does not matter, it is used in this manual to identify optional letters. The optional letters must be in the correct sequence. Some examples of what works, and what does not:

| Okay | Not Okay |
|---------|----------|
| DIS | DS |
| Disp | dsp |
| Displ | dply |
| Displa | DSPLY |
| Display | disply |

White Space

"White space" is normally the space character (space bar). A single white space must separate a command from its parameters or data. For example:

| Okay | Not Okay |
|-----------|----------|
| DELAY 500 | DELAY500 |

To enhance readability you can also use one or more white spaces before a comma, semicolon, or terminator. Since your computer normally puts the terminator at the end of each command string (line), this simply means that an extra space character at the end of your command line works OK.

A query has no space between the mnemonic and the question mark. For example:

| Okay | Not Okay |
|--------|----------|
| TIMER? | TIMER ? |

Note that too many consecutive white spaces can overflow the 80-byte data I/O buffer.

Terminators

A program message terminator identifies the end of a command string. These are the valid terminator sequences:

- <NL>
- <^END>
- <NL><^END>

Many computers terminate with <CR><NL><^END> (Carriage Return - New Line - EOI). A carriage return (<CR>) is read as white space.

The LDC-3700B terminates its responses with <CR><NL><^END>, unless you use the **TERM** command to change it.

If you encounter problems with GPIB communications, the terminator string can sometimes be the cause. Refer also to your GPIB interface (controller) manual.

Command Separators

You can put more than one command on the same line (same command string) if you separate them with a semicolon. The semicolon can be preceded by one or more spaces. Examples:

```
TEC:DIS 1; tec:set:t?;
TEC:MODE:t ; TEC:T 25 ; TEC:Const 1, 2, 3.5 ; TEC:OUT 1g1
```

Parameters

Some commands require a parameter. The parameter must be separated from the command by at least one space.

The syntax symbol <nrf value> refers to the flexible numeric representation defined by the GPIB standard. It means that you can represent numbers in integer or floating point form, or in engineering/scientific notation. The IEEE-488.2 standard uses the names NR1, NR2, and NR3 respectively to denote "integer", "floating point", and "scientific notation". For example the number "twenty" may be represented by any of the following ASCII strings:

| | | | |
|---------------------|------------------|--------------------|-----|
| Integer | 20 | +20 | NR1 |
| Floating point | 20.0 | +20.0 | NR2 |
| Scientific notation | 2.0E+1 2.0e+1 | +2.0E+1 +2.0e+1 | NR3 |

For more information on these definitions, refer to the IEEE-488.2 standard.

There are no default values for omitted parameters. If a command is expecting a parameter and none is entered, an error is generated.

For further clarity in programming, the (Boolean) values of one (1) and zero (0) may be used or their names as indicated in the following table.

Table 3.1 Substitute Parameter Names

| SUBSTITUTE NAME | VALUE |
|-----------------|-------|
| ON | 1 |
| OFF | 0 |
| OLD | 1 |
| NEW | 0 |
| TRUE | 1 |
| FALSE | 0 |
| SET | 1 |
| RESET | 0 |

If multiple parameters are expected, they must be separated with commas. For example, to set the Steinhart-Hart constants (C1, C2, and C3) on a TEC module in the LDC-3916372 Laser Diode Controller, the following command may be sent:


```
TEC:CONST 1.111, 2.004, 0.456
```

The LDC-3916 uses a terminator of <NL><^END> (new line EOI). For users whose GPIB driver defaults expect a carriage return in the terminator, <CR><NL><^END>, the "TERM" command may be used for convenience. (See TERM on page 44.) For more information, refer to your GPIB driver configuration manual.

Figure 4.1 lists some of the LDC-3916's device-dependent commands, with the full path shown for each command and a brief explanation of its usage. Device-dependent commands for each module are listed in the module's instruction manual.

Command Tree Structure

The LDC-3916 commands require the full path notation.

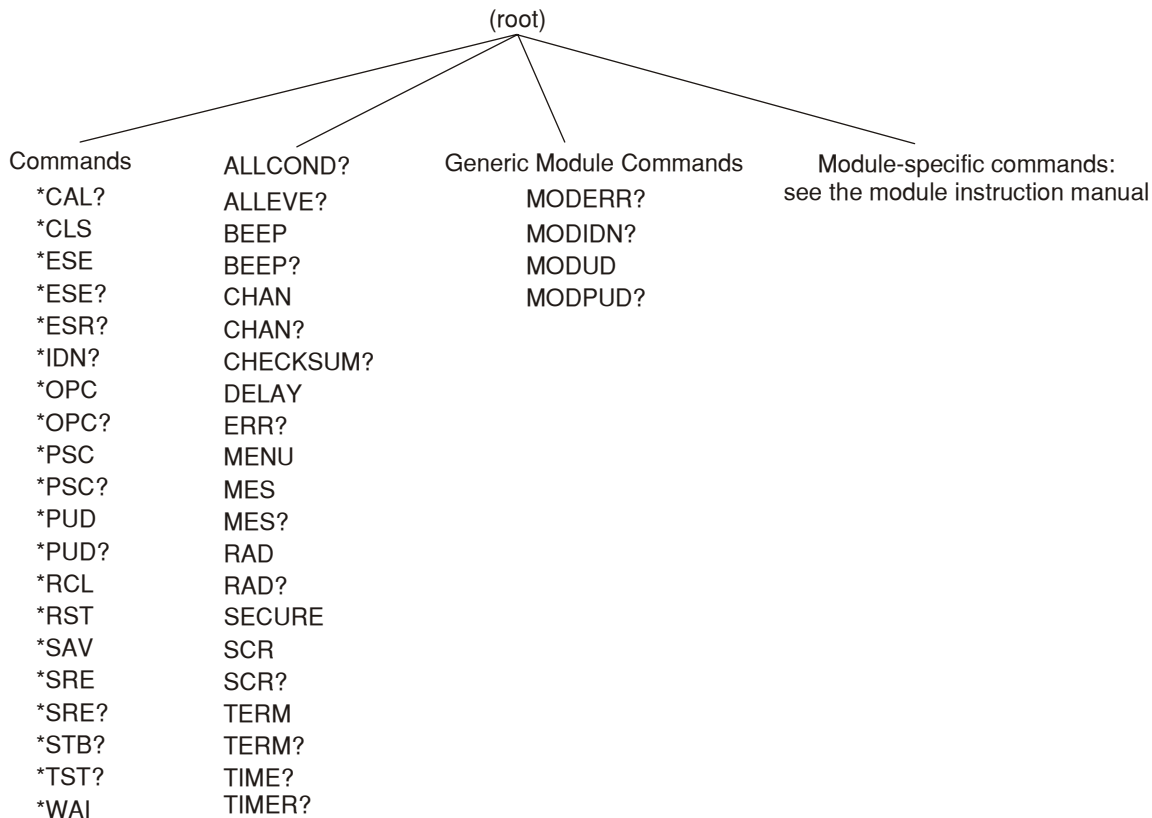

3916path

Figure 3.3 Command Path Structure

Syntax Summary

GPIB commands must contain all of the letters shown in upper case in the command definition. Optional letters shown in lower case for some device dependent commands in the command reference (Chapter 4) are useful for clarity, but must be in the correct sequence.

A single white space must separate a command from its parameters or data. White space is normally the space character (space bar). Other control characters are also interpreted as white space. Do not use white space before the question mark in a query command.

If you encounter problems with GPIB communications, the terminator string can be the cause. Refer also to your GPIB interface (controller) manual. The instrument accepts <NL>, or <^END>, or <NL><^END> as a command line terminator. Many computers terminate with <CR> <NL> <^END> (Carriage Return - New Line - EOI). The instrument ignores <CR> (Carriage Return) as white space. The LDC-3916 terminates its responses with <CR><NL><^END>, unless you use the **TERM** command to change it.

You can put more than one command on the same line (same command string) if you separate them with a semicolon.

GPIB uses a flexible representation for numeric parameters: integer, floating point, or engineering/scientific notation. There are no default values for omitted parameters.

Some device-dependent GPIB commands are compound commands, in which the first mnemonic opens a path to a set of commands relating to that path. The second mnemonic then defines the actual command.

Following are examples of invalid syntax command strings that will produce errors:

Table 3.2 Invalid Syntax Command Strings

| COMMAND | COMMENT |
|----------------|--|
| TEC:MODE T | Missing colon, MODE? expected. |
| TEC:MODE:R DEC | Missing semicolon, DEC command generates an error. |
| LAS:DIS ? | Space not allowed before question mark, DIS command expected. |
| Las:LDI33;dis? | Space missing between LDI command and the parameter value, 33. |

IEEE 488.2 Common Commands

IEEE 488.2 Common Commands and Queries are distinguished by the "*" which begins each mnemonic. The diagrams below show the syntax structure for common commands, common command queries, and common commands with numeric data required.

Numeric data is required with *PSC (1 = on, 0 = off), *RCL (0 to 10, see Save and Recall on page 14), *SAV (1 to 10, see Save and Recall on page 14), *ESE (0 to 255, see Table 3.3 on page 28), *SRE (0 to 255, see Table 3.3 on page 28), and *PUD (used at factory only).

The *CAL? query returns "1" if all LDC-3916 modules' self-calibration routines are completed properly, otherwise "0" is returned.

The *TST? query returns "1" if all LDC-3916 modules which were working at power-up (or at the time of the last *TST? query) have responded to the LDC-3916 mainframe within the past 15 seconds. If any modules fail to respond to the mainframe, *TST? will return "0", and those modules will no longer be recognized by the system.

A list of the IEEE 488.2 Common Commands supported by the LDC-3916:

| | | |
|-------|-------|-------|
| *CAL? | *CLS | *ESE |
| *ESE? | *ESR? | *IDN? |
| *OPC | *OPC? | *PSC |
| *PSC? | *PUD | *PUD? |
| *RCL | *RST | *SAV |
| *SRE? | *SRE | *STB? |
| *TST? | *WAI | |

For more information on these commands, refer to an ANSI/IEEE 488.2-1987 standards reference.

LDC-3916 Controller-Specific Commands

The LDC-3916's command set can be divided into three categories: 1) IEEE 488.2 common commands, 2) LDC-3916 mainframe commands, and 3) module-dependent commands. The IEEE 488.2 common commands and LDC-3916 mainframe commands are documented in this manual. The commands which apply to each module are found in that module's instruction manual.

Status Reporting

This section contains information for understanding instrument error and status reporting. It also contains information regarding the use of the instrument status for generating interrupts for interrupt-driven programs or subroutines. Understanding the Operation Complete definition for the instrument is useful for programming synchronization. The Output Off Register section also contains information on setting some of the conditions which will force the laser current source and/or TEC output to turn off.

The following sections describe the Event and Condition registers, Operation Complete flag, Output Off registers, and Error Messages.

Event and Condition Registers

In addition to the required IEEE 488.2 status reporting structures, the LDC-3916 remote interface provides Event and Condition registers for module operations. The ALLEVE register is used to report events which occur during the operation of the LDC-3916 and which are enabled to be passed up to the status byte. The ALLEVE register contains summary bits from each of the sixteen modules.

Likewise, the ALLCOND register is used to report conditions which occur during the operation of the LDC-3916, and which are enabled to be passed on to the status byte. The ALLCOND register contains summary bits from each of the sixteen modules.

The bits in the ALLCOND and ALLEVE registers are logically ORed to form a summary message in the status byte for that particular register.

Events are different from conditions. Events signal one-time occurrences and are not reset until either the corresponding module's Event Register(s) is queried, the *CLS command is issued, or the LDC-3916 is powered off. Conditions reflect the current state of the device and therefore may change many times during operation.

Figure 3.2 shows the status reporting scheme of the LDC-3916 Laser Diode Controller.

Operation Complete Definition

Note that Bit 0 of the Standard Event Status register contains the status of the Operation Complete flag. Enabling this bit via the *ESE command allows the user to update Bit 5 of the status byte. Then, if the SRE mask has bit 5 set, and the user issues an *OPC command, the SRQ signal will be generated upon completion of the currently processed commands. This may be used to initiate service request routines which depend on the completion of all previous commands.

The LDC-3916 defines Operation Completeness to be the state when all sequential and overlapped commands are completed. Most LDC-3916 commands are sequential; only a few are overlapped. Refer to your module's instruction manual for a list of overlapped commands.

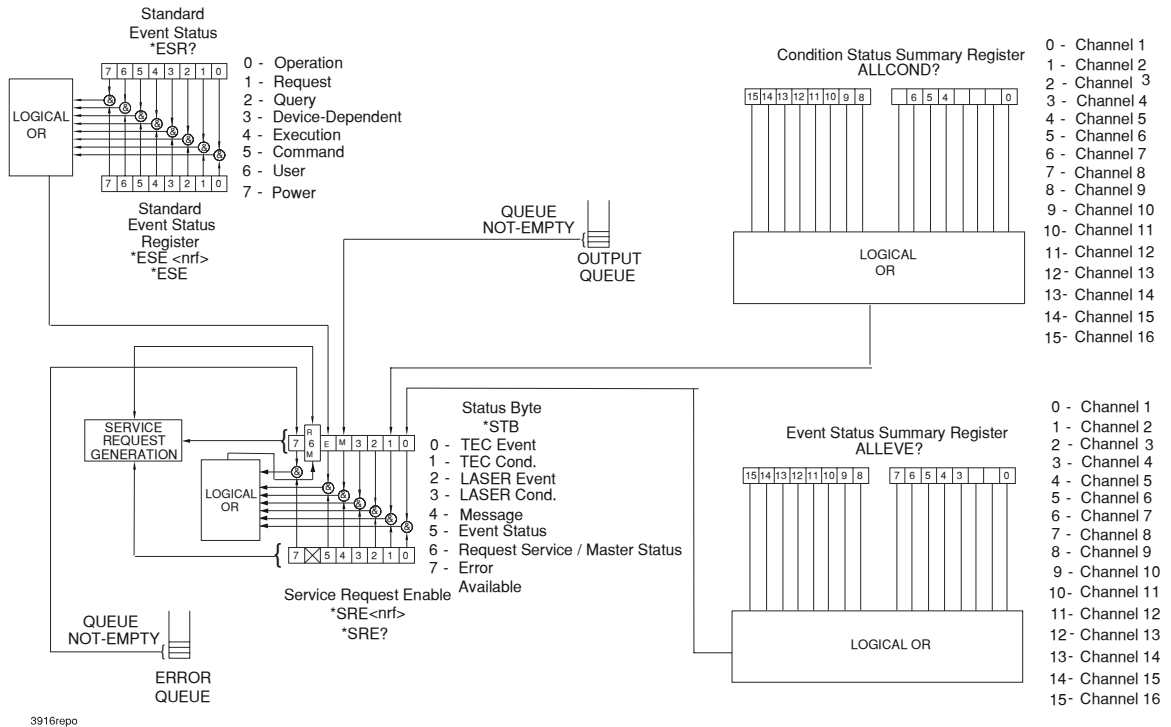


Figure 3.4 Status Reporting Schematic Diagram

Note: The LDC-3916 does not define operation completeness in the same way as earlier model ILX instruments.

Care must be taken when using the *OPC, *OPC?, and *WAI commands with the LAS:OUT ON command, due to the two-second turn-on delay. In some cases operation completion may far exceed the standard GPIB time-out setting.

If the GPIB times out while waiting for a response, either set the GPIB time-out to be longer or use SRQ-generated interrupts in your program. See your GPIB manual for time-out configuration or SRQ programming setup.

Command Timing

This section describes, for each device-dependent command, whether that command is performed in an overlapped or sequential manner. In other words, it states whether the next command may begin while this command is being executed, or if the next command must wait until this command is completed before its execution begins. See Operation Complete Definition on page 30 for conditions about setting the operation complete flag.

Sequential/Overlapped Commands

All device-dependent commands are executed in an overlapped manner: subsequent commands may begin before the current command is completed. Some common commands are sequential; the next command must wait until this command is completed. All device-dependent commands are executed in an overlapped manner, except the "DELAY" command which is sequential. The operation complete flag is set after the conditions outlined in the Operation Complete Definition have been satisfied.

The *WAI (common command) is an example of a sequential command which forces the next command to wait until the no-operation-pending flag is true. This is essentially the same as waiting for the OPC flag to become true, because the no-operations-pending flag is used to set the OPC flag (bit 0 of the Standard Event Status Register).

Commands which change the status of the instrument limits, or change its mode or current range, step value, or status enable registers, will not have their OPC flag set until all current writing to non-volatile memory has been completed. This ensures the OPC flag is never set prematurely.

Query Response Timing

Query responses are evaluated at the time the query request is parsed, and not at the time the response message is sent. In most cases this does not create a problem since the time between parsing a query and sending its response is small.

Error Messages

In the event of a hardware error condition, error messages are displayed on the channel menu screens. In addition to hardware errors, GPIB errors from the channel (module) may be read via the MODERR? query. Mainframe Errors and a binary representation of channel errors may be read over GPIB using the ERR? query. For example, a response from ERR? might look like:

```
0,0000000010001000
```

This indicates that there are no Mainframe Errors, and that channel 4 and channel 8 both have errors. Read those error codes by sending: CHAN 4;ERR?;CHAN 8;ERR?.

Table 3.3 lists the numerical error ranges by function. Table 3.4 on page 33 contains all of the error messages which may be generated. Not all of these messages may appear on the front panel displays. Some refer to GPIB activities only.

In remote operation, the errors can be read by issuing the ERR? query. When this is done, all of the error messages which are resident in the error queue are returned (up to 10 may be stored). Reading the error queue via GPIB clears the error queue.

Table 3.3 Mainframe Error Code Classifications

| Error Code Range | Area of Operation |
|------------------|---|
| E-100 to E-199 | Parser Errors |
| E-200 to E-299 | Execution Control Errors |
| E-300 to E-399 | GPIB Errors |
| E 700 to E 799 | Mainframe Errors |
| E 900 to E 999 | Mainframe-to-Module Communication Errors |

Table 3.4 Mainframe Error Codes

| Error Code | Explanation |
|------------|--|
| E-124 | Command not recognized by mainframe. |
| E-125 | Common command not recognized by mainframe. |
| E-126 | Too few or too many program data elements. |
| E-201 | <PROGRAM DATA> -- Value out of range. |
| E-202 | <PROGRAM DATA> -- Will not convert to valid type. |
| E-203 | Security violation; command is not available without clearance. |
| E-225 | No modules are present. |
| E-226 | Arbitrary Block data header not valid. |
| E-227 | Invalid channel selection. |
| E-228 | String delimiter not found. |
| E-229 | "Channel All" command not valid; all modules in mainframe must be the same model. |
| E-301 | A <RESPONSE MESSAGE> was ready, but the controller failed to address the device to talk. |
| E-302 | Device was addressed to talk, but controller failed to read all of the message. |
| E 710 | Over-temperature Error found on internal sensor #1. |

Table 3.4 Mainframe Error Codes

| Error Code | Explanation |
|------------|---|
| E 711 | Over-temperature Error found on internal sensor #2. |
| E 712 | Over-temperature Error found on internal sensor #3. |
| E 713 | Power Brown-out Error detected. |
| E 714 | Internal Error writing to display. |
| E 9xx | Internal communications warnings. |

COMMAND REFERENCE



This chapter is a guide to all of the mainframe device-dependent commands for the LDC-3916 Laser Diode Controller. The chapter is divided into two parts. The first contains an overview of the remote commands used by the LDC-3916, as shown in Table 4.1. The second part contains all of the LDC-3916 command descriptions, listed in alphabetical order.

LDC-3916 Device-Dependent Commands

Table 4.1 Device-Dependent Commands

| Name | Parameters | Function |
|-----------|------------|---|
| ALLCOND? | NONE | Returns the summary of all 16 channels' condition bits which are further summarized in the Status Byte. |
| ALLEVE? | NONE | Returns the summary of all 16 channels' event bits which are further summarized in the Status Byte. |
| BEEP | 1 | Enables the beeper, or beeps once. |
| BEEP? | NONE | Returns the enable status of the beeper. |
| CHAN | 1 | Selects a channel (or all channels) for further commands. |
| CHAN? | NONE | Returns the selected channel. |
| CHECKSUM? | NONE | Returns a value which is the checksum of the 3916 setup parameters. |
| DELAY | 1 | Used to create a delay in the execution of further commands. |
| ERR? | NONE | Returns errors generated since the last query. |
| MENU | 1 | Selects a menu for the front panel display. |
| MES | 1 | Enters a string message of up to 16 bits. |
| MES? | NONE | Returns a previously stored ASCII message. |
| MODERR? | NONE | Returns the error codes of the selected channel(s). |
| MODIDN? | NONE | Returns the model number, serial number, and firmware version of the selected channel(s). |
| MODPUD | 1 | Sets the module data (factory use only). |
| MODPUD? | NONE | Returns the module data. |
| RAD | 1 | Sets the radix for integer data. Decimal, binary, octal, or hexadecimal. |
| RAD? | NONE | Returns the radix type for numerical data. |
| SECURE | 1 | Used to gain access to protected data. |
| SCR | 1 | Enables or disables auto-scrolling in the status menu. |
| SCR? | NONE | Returns the status of the auto-scrolling feature. |
| TERM | 1 | Adds a carriage return to the device terminator. |
| TERM? | NONE | Returns the status of the TERM command. |
| TIME? | NONE | Returns the elapsed time since the instrument was last powered up. |
| TIMER? | NONE | Returns the elapsed time since the timer was last reset. |

Device-Dependent Command Reference

This section presents the mainframe device-dependent commands for both local and remote operation of the LDC-3916 Laser Diode Controller, listed in alphabetical order. Also included in this section are the descriptions of the Generic Module Commands, see Figure 3.3 on page 28. Refer to the appropriate module instruction manual for details on each specific module. Sub-sections for each path are presented, listing the commands which are legal for that path.

ALLCOND?

FRONT PANEL

REMOTE

The ALLCOND? query returns the status summary of enabled conditions from each channel of the LDC 3916 Laser Diode Controller.

Parameters None. The response is the sum of the following:

| | |
|----------------------------|-------------------------------|
| 1 - Channel 1 conditions | 256 - Channel 9 conditions |
| 2 - Channel 2 conditions | 512 - Channel 10 conditions |
| 4 - Channel 3 conditions | 1024 - Channel 11 conditions |
| 8 - Channel 4 conditions | 2048 - Channel 12 conditions |
| 16 - Channel 5 conditions | 4096 - Channel 13 conditions |
| 32 - Channel 6 conditions | 8192 - Channel 14 conditions |
| 64 - Channel 7 conditions | 16384 - Channel 15 conditions |
| 128 - Channel 8 conditions | 32768 - Channel 16 conditions |

Notes Each channel's conditions that are summarized here represent that channel's contribution to the Status Byte Register. All of the "bits" of the ALLCOND register are logically ORed to set or clear bit 0 of the Status Byte Register.

The value of the ALLCOND register is not cleared until it is read using the ALLCOND? query. Thus, if an SRQ is generated from any of the condition "bits" of the ALLCOND register, it is necessary to use the ALLCOND? query in the user's interrupt service routine to reset the interrupt-enabled condition. Otherwise, multiple interrupts would occur.

Typical use of the ALLCOND? query would be in conjunction with the *STB? query. For example, if you first read the status byte with *STB? and find bit 0 is set, then you can read the ALLCOND? to find out which channel(s) generated the change. If more information is still required, then you can query the contributing channel(s) for the appropriate conditions (e.g. "CHAN 3;LAS:COND?" or "CHAN 12;TEC:COND?", etc.). For more information, see the appropriate condition-enable commands, e.g. "LAS:ENAB:COND" or "TEC:ENAB:COND". Refer to the appropriate module instruction manual for details on each specific module.

Examples "ALLCOND?" -response: 0, means the no channels have any enabled conditions to pass to the Status Byte register.

"allcond?" -response: 9, means that channels 1 and 4 have enabled conditions. Bit 0 of the Status Byte register is set.

"Rad bin;Allcond?" -response: #B10001, means that channels 1 and 5 have enabled conditions. Bit 0 of the Status Byte register is set.

ALLEVE?

FRONT PANEL
REMOTE

The ALLEVE? query returns the status summary of enabled events from each channel of the LDC-3916 Laser Diode Controller.

Parameters None. The response is the sum of the following:

- | | |
|------------------------|---------------------------|
| 1 - Channel 1 events | 256 - Channel 9 events |
| 2 - Channel 2 events | 512 - Channel 10 events |
| 4 - Channel 3 events | 1024 - Channel 11 events |
| 8 - Channel 4 events | 2048 - Channel 12 events |
| 16 - Channel 5 events | 4096 - Channel 13 events |
| 32 - Channel 6 events | 8192 - Channel 14 events |
| 64 - Channel 7 events | 16384 - Channel 15 events |
| 128 - Channel 8 events | 32768 - Channel 16 events |

Notes Each channel's events which are summarized here represent that channel's contribution to the Status Byte Register. All of the "bits" of the ALLEVE register are logically ORed to set or clear bit 1 of the Status Byte Register.

The value of the ALLEVE register is not cleared until it is read using the ALLEVE? query. Thus, if an SRQ is generated from any of the event "bits" of the ALLEVE register, it is necessary to use the ALLEVE? query in the user's interrupt service routine to reset the interrupt-enabled condition. Otherwise, multiple interrupts would occur.

Typical use of the ALLEVE? query would be in conjunction with the *STB? query. For example, if you first read the Status Byte with *STB? and find that bit 1 is set, then you can read the ALLEVE? to find out which channel(s) generated the change. If more information is required, then you can query the contributing channel(s) for the appropriate events (i.e. "CHAN 11;LAS:EVE?" or "CHAN 3;TEC:EVE?", etc.). For more information, see the appropriate event-enable commands, e.g. "LAS:ENAB:EVE" or "TEC:ENAB:EVE".

Examples "ALLEVE?" -response: 0, means the no channels have any enabled events to pass to the Status Byte register.
 "allEve?" -response: 19, means that channels 1, 2, and 5 have enabled conditions. Bit 0 of the Status Byte register is set.
 "Rad bin;AllEve?" -response: #B100001, means that channels 1 and 6 have enabled events. Bit 0 of the Status Byte register is set.

BEEP

FRONT PANEL
REMOTE

The BEEP command controls the LDC-3916 Laser Diode Controller's beeper. The beeper can be used to signal error or warning conditions.

Parameters An <nrf value>, 0 = Off (totally disabled); 1 = On, enabled for normal operation; and 2 = beep once.

Notes Disabling the BEEP will prevent the audible beeper signal from working during front panel operation, including calibration signals. The parameter must be a numeric value (0, 1, or 2), and not a character data substitute (such as On or Off).

Examples "BEEP 0" -action: The beeper is disabled.
 "BEEP 1" -action: The beeper is enabled for normal operation.
 "BEEP 2" -action: The beeper is beeped once.

BEEP?

FRONT PANEL
REMOTE

The BEEP? query returns the enable status of the LDC-3916 Laser Diode Controller's beeper.

Parameters None. A response of 0 = Off (totally disabled); 1 = On, enabled for normal operation.

Notes Disabling the BEEP will prevent the audible beeper signal from working during front panel operation, including calibration signals.

The beeper is normally enabled, unless it is specifically disabled via the "BEEP 0" remote command.

Examples "BEEP?" -response: 0, means the beeper is disabled.
 "Beep?" -response: 1, means the beeper is enabled for normal operation.

CHANnel

FRONT PANEL
REMOTE

The CHANnel command selects the modules that will receive subsequent channel-based commands.

Parameters An <nrf value>, a list of comma-separated <nrf values>, or "ALL".
 -where the <nrf value> (1 - 16) represents an LDC-3916 channel number.

Notes The modules in the selected channels will receive all channel-based commands until the next "channel" command.

Selecting a channel remotely does not affect the front panel display. To change the front panel display remotely, see "Menu" command.

If an invalid (missing) module is selected, an "E227" error will be generated, and the channel will not be changed.

Examples "chan 1" -action: selects the module in channel 1 for further channel-based commands (assuming a module exists in the channel).
 "Chan 1,3,4,8" -action: selects the modules in channels 1, 3, 4, and 8 for further channel-based commands.
 "Channel all" -action: selects all available modules for further channel-based commands

CHANnel?

FRONT PANEL
REMOTE

The CHANnel? query returns the channel numbers of the modules that have been selected to receive channel-based commands.

Parameters None. The response will be the channel numbers of the selected modules.

Notes If no channels are found by the mainframe, the response will be 0.

Examples "CHAN?" -response: "12", means the module in channel 12 is selected for channel-based commands.
 "CHAN?" -response: "3;4;16", means the modules in channels 3, 4, and 16 are selected for channel-based commands.
 "channel?" -response: "ALL", means that channel-based commands will be sent to all available modules.

CHECKSUM?

FRONT PANEL

REMOTE

The CHECKSUM? query returns an integer value which is the summation of all pertinent parameters of the present configuration.

Parameters None. The response consists of an integer value.

Notes The response value may be stored and compared at a later time to verify that the present configuration of the instrument is the same as expected. This feature works well with the *RCL (recall) command as a means of verifying a stored setup.

Examples The checksum does not test the functionality of the instrument or which modules are present. "CHECKSUM?" -response: 3812, is the checksum of the present configuration of parameters on the instrument.

DELAY

FRONT PANEL

REMOTE

The DELAY command causes the execution of commands to be delayed by a user-defined time interval. This command is similar to the *WAI common command, except that execution resumes after the specified number of milliseconds, instead of waiting for the Operation-Complete flag to be set.

Parameters An <nrf value> which represents the delay time, in milliseconds.

Notes Further commands are held off until the delay period elapses. This command is useful for creating delays which do not require very much program code and do not tie up the GPIB during execution.

Examples "DELAY 500" -action: Further commands and queries are not executed until 0.5 second has elapsed from the time this command is executed.
 "Tec:T 22;Delay 2000;Tec:T?" -actions: The TEC is set to 22.0°C, then the LDC-3916 Laser Diode Controller waits for about 2.0 seconds before displaying the measured temperature.

ERRors?

FRONT PANEL

REMOTE

The "ERRors?" query returns a list of "mainframe" device and command errors, followed by a binary representation of the occurrence of "module" device and command errors. The "mainframe" errors are those which have occurred since the last "ERR?" query. The "module" errors are not cleared until the "MODERR?" query is sent to each module which reports an error. The errors are notated by a number (code) which corresponds to the type of error which occurred. See Chapter 3, Error Messages, for information regarding error handling.

Parameters None. The response consists of one or more "mainframe" error code values, separated by commas and a 16-bit binary representation of errors which exist on each channel.

Notes A response of 0,0000000000000000 indicates that no errors were reported. The first zero indicates no "mainframe" errors, and the second (16-bit) zero indicates no "module" errors. The response data is sent as character data.

Examples "ERR?" -response: 0,0000000000000001 means no "mainframe" errors reported, but channel #1 has an error. Use "Chan 1;MODERR?" to retrieve the error code(s) from channel 1.
 "Errors?" -response: 219,1111111100000000, means that the LDC-3916 was unable to restore the setup parameters (at power-up) because of a change in modules. Also, there are errors present on channels 9 - 16.

MENU

FRONT PANEL
REMOTE

- The MENU command causes the front panel display to switch to the.
- Parameters An <nrf value> which represents the front panel menu selections. 1 = Channel Menu, 2 = Status Menu, or 3 = Summary Menu.
- Notes This command is useful for visually monitoring activity from the front panel while in remote operation.
 The channel used (when the parameter is 1) is the remotely selected channel, not the last front panel selected channel (see "Channel" command).
- Examples "Menu 1" -action: sets the front panel display to the remotely selected channel's main menu.
 "MENU 2" -action: sets the front panel display to the Status menu.

MESsage

FRONT PANEL
REMOTE

- The MESsage command allows the user to enter an ASCII string of up to 16 non-zero characters. This command may be useful for storing messages which relate to a test or configuration.
- Parameters An ASCII string that is 1 - 16 bytes in length.
- Notes The message may contain any ASCII character but will be terminated when a "NULL" terminator character is received. If the message has less than 16 bytes, the software will fill the remaining message space with the space character. After 16 bytes have been entered, the software will null-terminate the string.
- Examples MESSAGE "This is a test." -action: The string, "This is a test. ", will be stored in non-volatile memory.
 Mes "Test 3" -action: The string, "Test 3 ", will be stored in non-volatile memory.

MESsage?

FRONT PANEL
REMOTE

- The MESsage? query returns the previously stored message. This message will always be 16 bytes long and enclosed in quotes. The message is entered via the MESsage command.
- Parameters None. The response is a 16-byte-long character string.
- Notes The response data will be a 16-byte-long string. If there is no previously stored message, the response will be " ", all spaces.
- Examples "MES?" -response: "Test 3", means the previously stored message was "Test 3".
 "Message?" -response: "This is a test. ", means the previously stored message was, "This is a test."

MODERR?

FRONT PANEL

REMOTE

The MODERR? query returns a list of "module" device and command errors. The "module" errors are those which have occurred since the last "MODERR?" query. The errors are notated by a number (code) which corresponds to the type of error which occurred. See the appropriate module instruction manual for information regarding error handling for each specific module.

- Parameters None. The response consists of one or more "module" error code values, separated by commas.
- Notes A response of (0) indicates that no errors were reported. The response data is sent as character data.
- Examples "MODERR?" -response: 0 means no "module" errors reported.
 "Moderr?" -response: 501, means that the module has a LASER interlock error which prevented the LAS output from being turned on.

MODIDN?

FRONT PANEL

REMOTE

The MODIDN? query returns the module's model name and serial number.

- Parameters None. The response consists of the module's model number, serial number, and version number, separated by commas.
- Notes The serial number may also be found by removing the module from the mainframe and viewing the serial number information on the side of the module.
- Examples "MODIDN?" -response: "3916374,03740001,v1.00", for example.

MODPUD

FRONT PANEL

REMOTE

The MODPUD command allows the service technician to enter the protected user data. This data is normally changed only at the factory, and therefore the MODPUD command is not needed by the user.

MODPUD?

FRONT PANEL

REMOTE

The MODPUD? query returns protected user data from a module. This data is entered by factory personnel when the module is calibrated.

- Parameters None. The response consists of serial number, hardware version, option information, calibration date, and initials of the calibrating technician. The response is in the form of <arbitrary block data> with the header, #221, indicating twenty-one characters.
- Notes The serial number may also be found by removing the module from the mainframe and viewing the serial number information on the side of the module.
- Examples "MODPUD?" -response: #221037200020011120498grb

RADix

FRONT PANEL

REMOTE

| | |
|------------|---|
| | <p>The RADix command allows the programmer to select the radix type for status, condition, and event query response data. Decimal, binary, hexadecimal, and octal are allowed.</p> |
| Parameters | <p>Character program data is expected, as shown above.</p> |
| Notes | <p>DECimal is the default type. Only the first three letters of the words decimal, hexadecimal, binary, or octal are required.</p> <p>When the RADIX is selected, all status, condition, and event queries will return values in the new radix.</p> <p>In cases where the radix is not DECimal, the flexible numeric type <nrf value> (as shown in the Command Reference diagrams) will be replaced by HEX, BIN, or OCT representation.</p> <p>All of the above radices may be used to enter program data at any time, without the need for issuing the RADix command. The proper prefix must also be used with Hex (#H), binary (#B), or octal (#Q).</p> <p>This command may be useful for setting up status reporting blocks. The bit-wise status representation may be more easily read in BIN, HEX, or OCT.</p> |
| Examples | <p>"RAD dec" -action: the decimal radix is selected.</p> <p>"rad hex; *ESR?" -action: the hexadecimal radix is selected; -response: #H80, means power-on was detected.</p> |

RADix?

FRONT PANEL

REMOTE

| | |
|------------|---|
| | <p>The RADix? query allows the programmer to determine which radix type for status, condition, and event query response data is currently selected. Decimal, binary, octal, and hexadecimal are allowed.</p> |
| Parameters | <p>None. The response will be character data. A response of DEC means decimal, BIN means binary, HEX means hexadecimal, and OCT means octal.</p> |
| Notes | <p>DEC is the default type. The LDC-3916 Laser Diode Controller defaults to this radix at power-up.</p> <p>The RADix command is used to select the desired radix. Once it is changed, the new radix will remain in effect until the power is shut off or a new RADix command is issued.</p> |
| Examples | <p>"RAD?" -response: Dec, means the selected radix is decimal.</p> <p>"rad?" -response: Hex, means the selected radix is hexadecimal.</p> <p>"RADIX?" -response: Oct, means the selected radix is octal.</p> |

SECURE

FRONT PANEL

REMOTE

The SECURE command allows the service technician access to the protected user data command, *PUD, which is a common command. This data is normally changed only at the factory, and therefore the SECURE command is not needed by the user.

| | |
|---------------|--|
| SCRoll | FRONT PANEL REMOTE |
| Parameters | The SCRoll command enables or disables the auto-scrolling feature of the ALL status screen. A Boolean value, 0 = FALSE (disabled), non-zero = TRUE (enabled). |
| Notes | This command affects the Status screen only. The scrolling rate is not adjustable. When the auto-scrolling feature is enabled it is in effect until it is disabled or the LDC-3916 is powered off. |
| Examples | "Scr 1" -action: Enables the auto-scrolling feature of the Status screen. "SCROL 0" -action: Disables the auto-scrolling feature of the Status screen. |

| | |
|----------------|--|
| SCRoll? | FRONT PANEL REMOTE |
| Parameters | The SCRoll? query allows the programmer to determine the status of the auto-scrolling feature for the Status Menu. None. The response is an <nrf value>, 1 = TRUE (enabled), 0 = FALSE (disabled). |
| Notes | In local operation, the user must select the Status screen in order to determine if the auto-scrolling feature is in use. |
| Examples | "Scroll?" -response: 1, means that auto-scrolling is enabled for the Status screen. "SCR?" -response: 0, means that auto-scrolling is disabled for the Status screen. |

| | |
|-------------|---|
| TERM | FRONT PANEL REMOTE |
| Parameters | The TERM command allows the programmer to change the default (IEEE488.2 standard) terminator to include the carriage return. An <nrf value>, 0 = FALSE, non-zero = TRUE |
| Notes | An altered terminator will be in the form <CR><NL><^END>. Technically this takes the LDC-3916 Laser Diode Controller out of IEEE488.2 specification, but this command may be used for convenience when using non-standard GPIB controllers. This termination will be sent with all output until the "TERM 0" command is sent or the LDC-3916 Laser Diode Controller is powered off. |
| Examples | "Term 1" -temporarily sets <CR><NL><^END> as the output terminator. |

| | |
|--------------|--|
| TERM? | FRONT PANEL REMOTE |
| Parameters | The TERM? query allows the programmer to determine whether the default (IEEE488.2 standard) terminator has been altered to include a carriage return. None. The response is an <nrf value>, 1 = TRUE, 0 = FALSE. |
| Notes | An altered terminator will be in the form <CR><NL><^END>. This termination will be sent with all output until the "TERM 0" command is sent or the LDC-3916 Laser Diode Controller is powered off. |
| Examples | "Term?" -response: 1, means that the <CR><NL><^END> terminator is temporarily being used. "Term?" -response: 0, means that the <NL><^END> terminator (IEEE 488.2 standard) is being used. |

TIME?

FRONT PANEL

REMOTE

The TIME? query allows the programmer to determine how much time has passed since the LDC-3916 Laser Diode Controller was last powered up.

Parameters None. The response is character data in the form: hours:minutes:seconds.

Notes The TIME clock is independent of the TIMER clock.

Examples "Time?" -response: 00:01:02.36, means that 1 minute, 2.36 seconds have passed since the LDC-3916 Laser Diode Controller was powered up.
"TIME?" -response: 00:32:00.76, means that 32 minutes, 0.76 second have passed since the LDC-3916 Laser Diode Controller was powered up.

TIMER?

FRONT PANEL

REMOTE


The TIMER? query allows the programmer to determine how much time has passed since the last TIMER? query was issued.

Parameters None. The response is character data in the form: hours:minutes:seconds.

Notes Each time the TIMER? query is issued, the timer is reset to 0, and the elapsed time since the last TIMER? query is returned.

Examples "TIMER?" -response: 00:02:00.31, means the LDC-3916 Laser Diode Controller has been on for 2 minutes, 0.31 seconds since the last TIMER? query was issued.
"TIMER?" -response: 00:00:12.03, means the LDC-3916 Laser Diode Controller has been on for 12.03 seconds since the last TIMER? query was issued.

INDEX



A

- AC line power
 - cable 2
 - requirements 2
- accessories 6
- adjust controls 10
- adjust knob 10
- all channel menu 15
- ANSI/IEEE standard 488.2 5
- ANSI/IEEE Standard 488.2 1987 21
- arrow keys 10

B

- baud rate
 - changing 24
 - default 24
 - reading 23

C

- calibration 13
- channel menu 11
- command
 - common 29
 - controller-specific 30
 - mainframe device-dependent 36
 - path 28
 - separators 26
 - syntax 24, 25
- command set 25
- common commands 29
- communications
 - configuration 12
 - RS-232 24

- configuration
 - communications 12
 - default 8
 - display 12
 - GPIB 21
 - RS-232 23
 - save and recall 14
 - system 12
- connector
 - GPIB 2, 22
 - modulation 5, 19
 - rear panel 4
 - RS-232 2, 5
- controllers 21
- controller-specific commands 30
- controls
 - adjust 10
 - display 9
 - front panel 9
- customer service contact information xii

D

- default
 - baud rate 24
 - configuration 8
 - GPIB address 23
 - measurements 18
 - settings 15
- definition
 - operation complete 30
- device dependent commands 22, 25, 28
- device dependent message 21
- dimensions 5
- display configuration 12
- display controls 9

E

error messages 33
mainframe 33
event and condition registers 30

F

front panel controls 3, 9

G

general specifications 5
GPIB 21
address 21
cable connections 22
commands 28
connector diagram 23
connectors 22
numeric parameters 29
terminator string 26, 28
white space 25, 28
GPIB address 2
changing 23
default 23
reading 23
GPIB configuration 21
GPIB connector 2
grounding requirements 2

H

hard keys 9
humidity 5

I

I/O buffer 25
IEEE standard 488.2 5, 29
initialization 7
inspection 1
installation 2
interface messages 21, 22
invalid syntax commands 29

K

key switch
laser enable 3
keypad 10
keys
arrow 10
hard 9
numeric 10
soft 9
status 18
summary 17

L

laser enable 3
listener 21

M

main menu 11
mainframe device-dependent commands 36
maintenance 4
measurements
default 18
menu
all channel 15
calibration 13
channel 11
communications configuration 12
display config. 12
main 11
status 17
structure 11
system configuration 12
modulation 19
bandwidth 19
setup 19
modulation connector 19
mounting
rack 3

N

nrf value 26
numeric keypad 10
numeric parameters 29

O


operation
changing 24
local 24
remote 24
operation complete definition 30
options 6
overlapped/sequential commands 32

P

parameters 26
substitute names 27
power 2, 5, 7
grounding 2
switch 3
power on sequence 7

Q

query response timing 32



R

- rack mounting 3
- rear panel 4
- recall
 - save 14
- registers
 - condition 30
 - event 30
 - status 25
- reporting
 - status 30
- RS-232
 - communications 24
 - configuration 23
 - connectors 2, 5

S

- safety information ix
- save and recall 14
- sequential/overlapped commands 32
- service, contact information xii
- settings
 - default 15
- soft keys 9
- specifications 5
- status
 - key 18
 - menu 17
 - reporting 30
- substitute parameter names 27
- summary key 17
- syntax
 - command 24, 25
 - invalid command strings 29
 - nrf value 26
 - summary 28
 - white space 25, 28
- system configuration 12

T

- talkers 21, 23
- terminator 27
- terminator string 26
- terminators 26, 28
- tilt-foot adjustment 3
- timing
 - query response 32
 - sequential and overlapped commands 32

W

- warranty xi
- weight 5
- white space 25, 28