








Advanced performance products for laser scientists and engineers.

LaserDiodeSource.com | LaserLabSource.com | LaserDiodeControl.com

## **TECHNICAL SUPPORT & SALES IN NORTH AMERICA**

800.887.5065 contact@LaserLabSource.com





## Datasheet – TEC Controller TEC-1091 (±4 A / ±21 V)



## Support / First Steps

Meerstetter Engineering provides technical support for all products and helps you to integrate a product into your solution. Most of your questions should be solved by reading the provided <u>user manuals</u> of the corresponding product or the <u>FAQ</u> (frequently asked questions).

For further help or if you have any other questions, please do not hesitate to contact us. We are happy to help you. You can contact us by email <u>support@meerstetter.ch</u>.

## Meerstetter's Product Family Compatibility


The Meerstetter LDD- and TEC-Families have been developed to work along with each other. They share the same platform bus, communication protocol and hardware architecture. See the following table for an overview of the LDD- and TEC-Families.

LDD-Family		
LDD-1321	0-1.5 A / 0-14 V	CW, Add on TEC Controller available
LDD-1301	0-20 A / 0.5-45 V	1 ms - CW
LDD-1303	0-20 A / 1-120 V	1 ms - CW
LDD-1137	0-75 A / 0-70 V	0.5 µs - CW, modulated, QCW and pulsed modes
LDD-1124-SV	0-1.5 A / 0-15 V	1 µs - CW, modulated, QCW and pulsed modes
LDD-1121-SV	0-15 A / 0-15 V	1 µs - CW, modulated, QCW and pulsed modes
LDD-1125-HV	0-30 A / 0-27 V	1 µs - CW, modulated, QCW and pulsed modes
TEC-Family		
TEC-1092	±1.2 A / ±9.6 V	Micro, single channel
TEC-1091	±4 A / ±21 V	Small, single channel
TEC-1089-SV	±10 A / ±21 V	Medium, single channel
TEC-1162	±5 A / ±56 V	Medium-high, single channel
TEC-1090-HV	±16 A / ±30 V	Large, single channel
TEC-1163	±25 A / ±56 V	Extra-large, single channel
TEC-1161-4A	2 x (±4 A / ±21 V)	Small, dual channel
TEC-1161-10A	2 x (±10 A / ±21 V)	Medium, dual channel
TEC-1122-SV	2 x (±10 A / ±21 V)	Medium, dual channel
TEC-1166	2 x (±5 A / ±56 V)	Medium-high, dual channel
TEC-1123-HV	2 x (±16 A / ±30 V)	Large, dual channel
TEC-1167	2 x (±25 A / ±56 V)	Extra-large, dual channel

## Thermoelectric Cooling Temperature Controller

TEC Controller / Peltier Driver up to ±4 A / up to ±21 V

## Small OEM TEC Controller

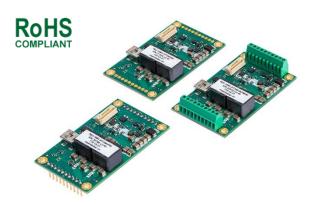

The TEC-1091 is a specialized TEC Controller / power supply able to precision-drive a single Peltier element.

It features a true bipolar DC current source for cooling / heating, two temperature monitoring inputs (1x main, 1x auxiliary) and intelligent PID control with auto tuning. The TEC-1091 is fully digitally controlled, its hard- and firmware offer numerous communication and safety options.

The included PC-Software allows configuration, control, monitoring, and live diagnosis of the TEC Controller via USB, RS485 and RS232 TTL. All parameters can be saved to non-volatile memory.

For the most straightforward applications, only a power supply, Peltier elements and two temperature sensors need to be connected to the TEC-1091. After power-up the unit will operate according to pre-configured values. (In stand-alone mode no control interface is needed.)

The TEC-1091 can handle either Pt100, Pt1000, NTC or Voltage temperature probes. For highest precision and stability applications a Pt100 / 4-wire input configuration is recommended. Analog measurement circuit is factory calibrated.

Auxiliary temperature input allows the connection of an NTC probe that is located on the heat sink of the Peltier element. This additional data is used to compensate for parasitic thermal conduction of Peltier element. Also, it allows the control of an external heat sink cooling fan.

The heating and cooling power is optimized by proprietary thermal management routines based on power balance models (for Peltier elements and resistive heaters).

Further functionality includes: Smooth temperature ramping, thermal stability indication and auto gain (NTC probes). The PC-Software allows data logging and configuration import/export.

Many features (hardware, software) of this OEM product are customizable upon request.

## Features

#### Output Stage:

- DC Input Voltage: 5 24 V
- Output Voltage: 0 to ±21 V (max. ~ 0.9 · U<sub>IN</sub>)
- Output Current: 0 to ±4 A, <1 % Ripple (TEC Modules with higher Output Power available)

#### Main Features:

- Temperature Sensor Types: Pt100, Pt1000, NTC, Voltage
- Temperature Precision / Stability: <0.01 °C</li>
- Temperature Control & Measurement Frequency: 1 Hz, 10 Hz, 90 Hz
- Performance-optimized PID for Thermal Power Control
- Configuration / Diagnosis over all communication interfaces with PC Software
- Dimensions (L x W x H): 65 mm x 38 mm x 14 mm
- Efficiency: 96 % (@ 90 % Load)
- Cooling not required (natural convection)
- Low Resolution Heat Sink NTC Temp. Sensor Input
- Measurement Inputs freely assignable to any Output
   Channel
- Bipolar output channel can be split into unipolar channels

#### **Operation Modes:**

- Stand-Alone without Live Control Interface
- Remote-Controlled over USB, RS485, RS232 TTL, CANopen CiA 301, I/O
- Script-Controlled over Lookup Table Read-Out

#### **Driver Modes:**

- DC Power Supply: Set Current or Voltage
- Temperature Control: PID Settings, Auto Tuning, optional Cool/Heat-Only or Resistor modes

#### Data Interfaces:

- USB 2.0 1kV isolated (FTDI Chip)
- 1x RS485 (Half-Duplex)
- 1x RS232 TTL
- CANopen CiA 301

#### General Purpose I/O Features:

- 6x Digital I/O Signals (3.3 V / 5 V)
- Configurable as Input to control TEC-1091 (Enable, Temperature Up / Down etc.)
- Configurable as Output to monitor TEC-1091 (Error Indication, Temperature Stable Indication etc.)

#### **Optional Components:**

 Various displays available up to 4x20 Chars (e.g., DPY-1113)

#### **Further Information:**

 Please contact us for additional information or consult the current TEC Controller User Manual (Document 5216).




TEC Controller / Peltier Driver up to  $\pm 4 \text{ A}$  / up to  $\pm 21 \text{ V}$ 

#### **Absolute Maximum Ratings**

Supply voltage (DC) 27 V

## **Operating Characteristics for all firmware versions**


Temperature -40 – 90 °C

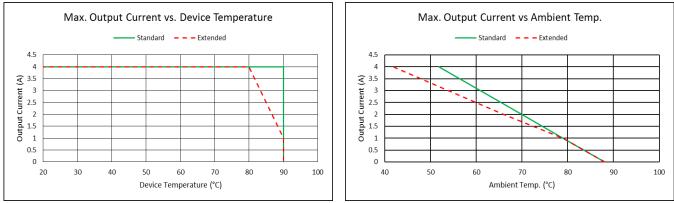

Standard or Extended Device Temperature Mode can be set as software setting. Using forced air cooling, it is possible to enhance the ambient temperature performance.

Additional information about the charts above:

- Standard or Extended device temperature mode can be set as a software setting.
  - o In standard mode, the device throws an error and switches off if the maximal device temperature is reached.
- In extended mode, the device first reduces the maximum output current before it throws an error and switches off.
   The <u>Device Temperature</u> is the temperature which is being measured by the TEC Controller itself on its own PCB. This is the temperature which is relevant for the overtemperature behavior (left chart).

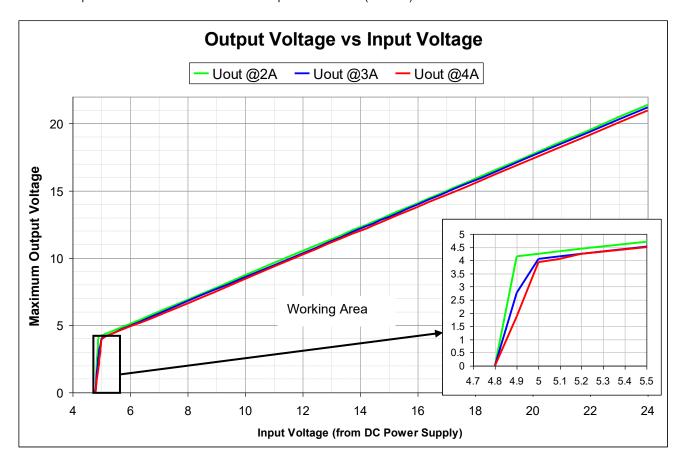



**TEC-1091** HW v3.40 / v3.50

TEC Controller / Peltier Driver up to ±4 A / up to ±21 V

#### **Electrical Characteristics**

Symbol	Parameter	Test Conditions / Hints	Min	Тур	Max	Units
DC Power S	upply Input:					-
U <sub>IN</sub>	Supply voltage	Measured directly on power input terminals 4.9				V
U <sub>IN</sub> Ripple	Ripple tolerance	U <sub>IN</sub> never below U <sub>IN min</sub> or above U <sub>IN max</sub>			300	mV <sub>PP</sub>
l <sub>IN</sub>	Max input current	Hint: Software limitation			3.8	Α
Output (per	Channel):					
Іоит	Bipolar current				±4	Α
Uout	Bipolar voltage	Uou⊤ is maximum ~0.9 * U <sub>IN</sub>			±21	V
lout	Unipolar current <sup>1</sup>				4	Α
Uout	Unipolar voltage 1	Uou⊤ is maximum ~0.9 * U <sub>IN</sub>			21	V
Uout Ripple	Voltage ripple	@4A		80		тV <sub>PP</sub>
loυτ Drift	Output current			0.1		mA/°C
	temperature drift					
System Cha	racteristics:					
η <sub>50%</sub>	Power efficiency	@ 50 % load (10.5V, 4A)		94		%
η100%	Power efficiency	@ 100 % load (21V, 4A)		96		%
Output Mon	itoring: (IOUT Resolut	ion is 1.46mA; U <sub>OUT</sub> Resolution is 6.1mV)				
IOUT Read	Precision	@ 3.8 A			5	%
U <sub>OUT</sub> Read	Precision	@ 15.0 V	3	%		

<sup>1</sup> In unipolar mode, the total output power is doubled in comparison to the bipolar mode, but the controller input current is limited to I<sub>IN</sub>, which limits the total available output power. The controller limits the output current for each channel dynamically if the max input current limit is reached.

## **Output Safety Characteristics**

Unless otherwise noted:  $T_A = 25 \text{ °C}$ ,  $U_{IN} = 24 \text{ V}$ 

Symbol	Parameter	Test Conditions / Hints	Min	Тур	Max	Units	
Output Sta	age Protection Delays:						
toff	Short circuit	Full load condition		10	30	μS	
toff	Power system limits	Current and voltage limits			200	μS	
Output Stage Current Supervision: (If the OUT+ and OUT- currents differ too much, an error is generated)							
OUT_DIFF	Error threshold			400		mA	

#### High Resolution Temperature Measurement Characteristics (Pt100 and Pt1000 Probes)

Measurement configuration = 23bit / 4-wire / unshielded cable <50mm

Symbol	Parameter	Test Conditions / Hints	Min	Тур	Max	Units
Thr, range	Range	Range is extendable upon request Default measurement range is -220 °C +200 °C Extended measurement range is -193 °C +787 °C	-100		+200	°C
Thr, prec	Precision	(EN 60751 / IEC 751)		0.005	0.01	°C
THR, COEFF	Temp. Coefficient	Relative to device temperature			1.6 m	°C/K
THR, NOISE	Value Noise	Reference measurement fluctuations while output stage operating @ 70 % load		0.003		°C
T <sub>HR, REP</sub>	Repeatability	Repeated measurements of reference resistors after up to 3 days		0.005		°C



## Thermoelectric Cooling Temperature Controller

**TEC-1091** HW v3.40 / v3.50

TEC Controller / Peltier Driver up to ±4 A / up to ±21 V

#### High Resolution Temperature Measurement Characteristics (NTC Probes)

NTC thermistor resistive input characteristics translate into temperature ranges valid for only one type of NTC probe. Below example is given in the case of an NTC B<sub>25/100</sub> 3988K R<sub>25</sub> 10k temperature sensor.

Symbol	Parameter	Test Conditions / Hints	Min	Тур	Max	Units
	ADC Auto Gain PGA = 1 or 8 or 32	Low-°T Configuration $R_s = 56 k\Omega$			55742	Ω
		Corresponding temperature range	176 to -10.1		°C	
Rhr, RANGE		Very Low-°T Configuration NTC			1M	Ω
		Corresponding temperature range	ge 194.3 to -55.5		°C	

RHR, RANGE is the resistance range of the NTC sensor

# High Resolution Temperature Monitoring Characteristrics (Voltage Measurement VIN1 / VIN2)

Sensors with linear Voltage/Temperature output.

Symbol	Parameter	Test Conditions / Hints	Min	Тур	Max	Units
VSENS, DIFF	Range	Differential input voltage Temperature range depends on sensor used	-2.039		2.039	V
VHRUX, ABS	Range	Absolute input voltage	-0.1		5.1	V

#### Low Resolution Temperature Measurement Characteristics (NTC only)

T <sub>A</sub> = 25 °C, measurement configuration = 12bit / 2-wire / unshielded cable <50 mm, °T probe = NTC B <sub>25/100</sub> 3988K R <sub>25</sub> 10k							
Symbol	Parameter	Test Conditions / Hints	Min	Тур	Max	Units	
D	Danga		50		49781	Ω	
RLR, RANGE Range		Corresponding temperature range		214 to -8.1	ĺ	°C	

#### RS232 TTL and General Purpose Digital I/O Characteristics (GPIO1 ... GPIO4, RX, TX)


Unless otherwise noted:  $T_A = 25 \degree C$ ,  $U_{IN} = 24 V$ 

Symbol	Parameter	Test Conditions / Hints	Min	Тур	Max	Units
Input Cha	racteristics:					
Uih	Logic high input threshold		2.38			V
U⊫	Logic low input threshold				0.93	V
UIMAX	Maximum input voltage		-0.5		5.5	V
Output Ch (Microprocess	aracteristics:					
U <sub>он</sub>	Logic high output voltage	Output current 8mA	2.8			V
Uol	Logic low output voltage	Input current 8mA			0.4	V
ESD Prote	oction:					
	ocessor and Connector)					
VPP	ESD discharge	IEC61000-4-2			100	kV
RA	Series resistance		170	200	230	Ω



TEC Controller / Peltier Driver up to ±4 A / up to ±21 V

HW v3.40 / v3.50

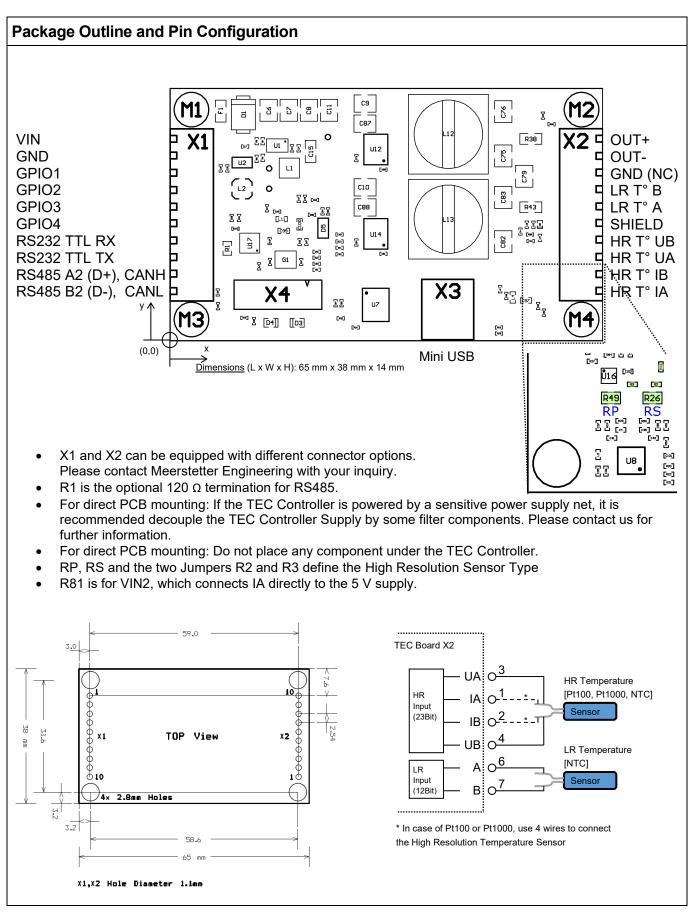

Peltier element, temperature probes, power supply and connectors not included.



## **Operation Modes and Communication Options**

The TEC-1091 is an OEM precision TEC Controller that is primarily designed to operate as a stand-alone device. Once configured and in operation, its basic status is visually indicated by on-board green and red LEDs and their blinking pattern. More detailed status information can be polled at any time by industry standard RS485 / RS232 TTL connection or by USB (see box below). The TEC-1091 can also operate in a remote-controlled manner, with parameters adjusted on the fly. Scripting capability by sequential lookup table read-out is supported.

Configured as a DC power-supply, the TEC-1091 can handle current and voltage settings. In the remote-control case, temperature data may be passed on to be processed by the host.

Configurable parameters further include: sensor linearization (Pt100 / Pt1000) and Steinhart-Hart modeling (NTC), temperature acquisition hardware calibration, Peltier element modeling, PID controller auto tuning, nominal temperature ramping, current, voltage and temperature limits, error thresholds, etc. Please refer to the TEC Controller User Manual (Document 5216) for further information.

### **TEC-1091** Ordering Information, Hardware Configuration

Example Configuration: TEC-1091-PT100-SCREW

TEC M	odel:	High Resoluti	on Sensor Type:	Terminal Configu	ration:
- TEC-	1091	- PT100 (4 Wir	e)	- SCREW (2.54mn	n Screw Terminal)
		- PT1000 (4 W	ire)	- PIN (2.54mm Pin	Header)
		- NTC (2 Wire)		- NC (no connecto	r)
		- VIN1		- (Special connected	or on request)
		- VIN2			

#### High Resolution Sensor Type:

NTC: By default, we mount an NTC1M. If you require an older version (NTC56K), please write which one you need in the comment section of your order or contact us: <u>contact@meerstetter.ch</u>.

Thermocouple:

To use our TEC Controllers with thermocouples type K, you need a TCI-1181 in addition to the TEC Controller with a VIN1 or VIN2 High Resolution Sensor Type configuration.

#### **Display Unit:**

It is possible to connect a small or big OLED 2x16 / 4x20 character display directly to the X11 connector of the device. Please visit the DPY-111x product pages on our website for further information.

#### Customization:

Many hardware and software features of the TEC-1091 are customizable upon request. Please contact Meerstetter Engineering with your enquiry.

Meerstetter Engineering GmbH Schulhausgasse 12 3113 Rubigen, Switzerland



Phone: +41 31 529 21 00 Email: contact@meerstetter.ch Website: www.meerstetter.ch

Solution Member of Berndorf Group

Meerstetter Engineering GmbH (ME) reserves the right to make changes without further notice to the product described herein. Information furnished by ME is believed to be accurate and reliable. However typical parameters can vary depending on the application and actual performance may vary over time. All operating parameters must be validated by the customer under actual application conditions.



TEC Controller / Peltier Driver up to  $\pm 4 \text{ A}$  / up to  $\pm 21 \text{ V}$ 

**TEC-1091** HW v3.40 / v3.50

## **Change History**

Date of change	Version	Changed/ Approved	HW- Version	Change / Reason
14 October 2024	Т	XF / ML	v3.40 /	Add: Change History
			v3.50	<ul> <li>Add: New Main Feature: Measurement Inputs are freely assignable to any Output Channel</li> </ul>
				Add: New Main Feature: Bipolar output channels can be split into unipolar channels
				<ul> <li>Add: "Unipolar current per channel" and "Unipolar voltage per channel" specifications in "Electrical Characteristics" section</li> </ul>
				<ul> <li>Add: Max Input Current (I<sub>IN</sub>) specification in Electrical Characteristics section</li> </ul>
				<ul> <li>Mod: Measurement Frequency is now possible up to 90 Hz instead of 80 Hz</li> </ul>
				<ul> <li>Mod: The RS232 pins can now be used as GPIO pins, which makes it possible to use 6 GPIO pins in total</li> </ul>
				<ul> <li>Mod: Changed naming of "Main"/"Object" measurement input to "High Resolution" measurement input</li> </ul>
				<ul> <li>Mod: Changed naming of "Auxiliary"/"Sink" measurement input to "Low Resolution" measurement input</li> </ul>
				<ul> <li>Mod: Specified that the RS485 Data Interface only supports Half-Duplex communication</li> </ul>
				<ul> <li>Fix: "NTC1M" is the default NTC configuration and not "NTC56K"</li> </ul>
				Del: RS422 communication is not supported
				Del: "Bipolar output current" and "Bipolar output voltage"     removed from "Absolute Maximum Ratings" section
				Del: "TEC Service Software" and "Temperature Control (Autotuned PID)" sections removed