






# LASER DIODE CONTROL ELECTRONICS AND MOUNTING MODULE - SF8025-14

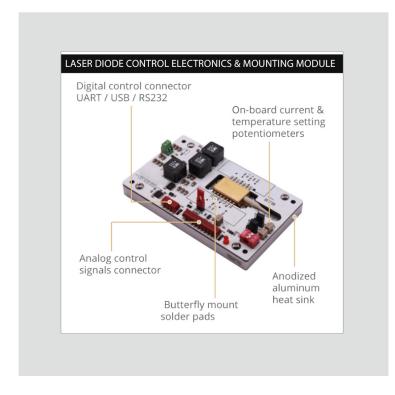

# ADVANCED PERFORMANCE HYBRID LASER DIODE CONTROL ELECTRONICS & MOUNTING MODULE

- ♦ An All-Inclusive Laser Diode Control Solution:
  - Low Noise Laser Diode Current Source
  - TEC Controller
  - Butterfly Package Laser Diode Mount
- ♦ Complete Protection for Your Laser Diode:
  - Soft-Start Current Ramp
  - User Set Current Limit
  - User Set Temperature Limit
  - Zener Diode to Shunt Power Surges
- ♦ PC Control Through RS232 or USB
- Analog Control Signals Connector to Simplify Integration into a Laser System Product
- ♦ Free Control Software with GUI

**Semiconductor Laser Sources and Control Instruments** 





# **ALL-ENCOMPASSING PROTECTION FOR YOUR LASER DIODE**

On-Board Component Level Protection Against Input Power Surges and Reverse Voltage Transients: An integrated on-board zener diode in parallel with the bias current path protects the laser diode from damage which can occur from reverse voltage transients. These transients can occur when a standard DC power

supply source is momentarily interrupted due to a black-out or brown-out power outage.

# **User Adjustable Current and Temperature Limits:**

The user can set current limit and temperature limits through on-board potentiometers. Limits can also be set using your PC through the included control software. Finally, limits can be set using the analog control signals input. Setting limits are necessities to ensure a long life-time for your laser.

# **Soft-Start Current Ramp:**

There is an internal 500 millisecond soft-start ramp to the current set-point. This reduces the potential for thermal shock to the laser at power ON and is used to ensure good electrical contact prior to fully applying the current bias the laser diode.

# Additional External Over-Temperature Monitor/ Shut-Down Input:

Primarily designed for integration of the module into a laser system, an additional thermistor input is provided to allow the user to monitor the temperature from an external measurement point. This can then be used to shut the laser diode off if a temperature maximum for the system is exceeded.

# **Laser Diode Blas Current and DC Power Shunting Cllps:**

These module ship with a jumper clip that shunts the laser diode bias current path of the driver to protect the laser from ESD or static discharge when the user is installing the laser into the mounting socket. This shunt also protects the laser when the user is connecting the DC power or any other external equipment.




# **Advanced Performance Laser Diode Control and Mount Module:**

These hybrid laser diode control electronics and mounting modules offer an all-inclusive, high performance solution for controlling butterfly packaged laser diodes. These controllers are an excellent choice for integration into a laser system product or as an affordable solution for laboratory test set-ups. Key features of these modules Include a low noise laser diode current source to safely electrically bias your laser diode, an Integrated TEC Itemperature controller and a 14-pin butterfly package mounting socket. They also include multiple control interface options to enable you to control all of the paramaters of your laser dode. Interfaces include on-board potentiometers, an RS232 interface, a USB interface and an anolog control signals connector.

# **Small Footprint:**

Careful selection of components and and exacting design criteria allows the modules to provide complete control of your laser In a 61mm x 101mm package. They have a 10mm thick aluminum base plate which provides excellent heat dissipation and keeps the laser diode safely operating within your desired operating temperature range. The module base plate comes with 4 mounting through-holes, 3.2mm each, to bolt the module directly to an instrument chassis or any thermally conductive surface.

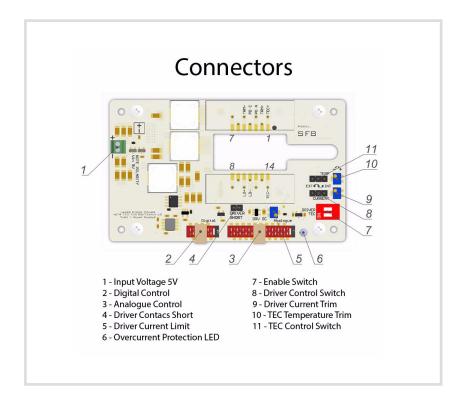


A Division of Laser Lab Source
LaserDiodeSource.com | LaserDiodeControl.com | LaserDiodeTechnologies.com



Product includes control software GUI for simple set-up and monitoring of your laser diode; alternately - you can use the trim pots on the board or the analog control connector




Software opens when you connect the USB adapter board; USB adapter board is included with shipment

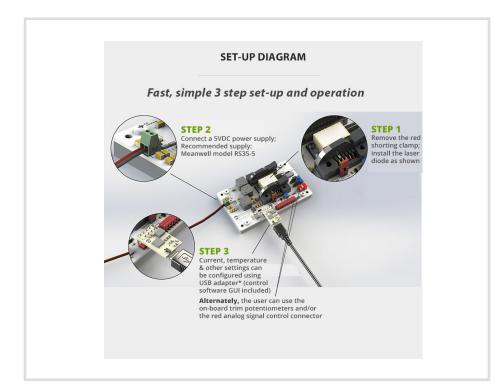

A Division of Laser Lab Source
LaserDiodeSource.com | LaserDiodeControl.com | LaserDiodeTechnologies.com



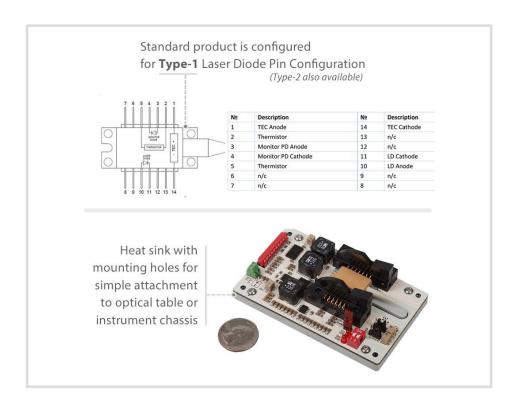

Recommended / Compatible DC Power Supplies Available to Purchase with this Control Electronics & Mount Module

# Affordable General Purpose Switch Mode DC Power Supply:

Mean Well LRS-35-5 (5V, 7A) Good choice for pump lasers (ie 808nm, 976nm, 980nm)



# More Expensive Low Noise Linear DC Power Supply:

Condor HC5-6-OV-A+G (5V, 6A) Linear supply for lower noise performance; best suited for single frequency laser diodes (ie DFB, DBR)



# SF8025-14 SPECIFICATIONS

## **CURRENT, VOLTAGE & TEC CONTROLLER**

- Output current LD (I): 250 mA
- Output voltage LD (V): 0.5-3 V
- Current stability: 0.1 %
- Current set point accuracy: 1 %
- Output current noise: < 10 μA
- TEC output power: ±4A
- TEC output voltage: ±4V
- TEC output current ripple: 2-4mA
- Temperature Control Range: +15 to +40 °C

#### LASER DIODE PROTECTION

- Current limit
- Temperature limit
- Reverse current protection
- ESD and transient protection
- Soft-start laser diode current ramp.

#### **DIMENSIONS AND WEIGHT**

- Dimensions 101.6 x 61 x 30 mm
- Weight: 136 g

#### **USER INTERFACE**

- Trim Potentiometers for Drive Current and TEC Power
- Analog
- RS-232 / UART Digital Interface (USB as a paid option 25\$)

#### **INPUT**

- Input voltage range (Vin): 5 VDC
- Recommended Linear / Switching Power Supply Options:
- Condor HC5-6-OV-A+G Linear Power Supply for better low-noise performance, narrow DFB laser line width
- Mean Well LRS-35-5, Switching Power Supply more economical; ideal for pump lasers

#### **SHIPPING KIT (INCLUDED PARTS)**

- SF8000 series control and mount module
- 50 cm ribbon cable with one 8-pin connector 1 pcs
- 50 cm ribbon cable with one 20-pin connector 1 pcs
- Datasheet & User Manual 1 pcs

#### **WARRANTY PERIOD**

• 1-year manufacturer's warranty

A Division of Laser Lab Source
LaserDiodeSource.com | LaserDiodeControl.com | LaserDiodeTechnologies.com



## **PRODUCT WARRANTY:**

This product is sold with a full one year warranty. The warranty includes all parts and labor. It is warrantied to be free from defects in material and workmanship for a period of one year from the date of shipment. The warranty does not include damage to the product due to customer mishandling or use of the product outside of its specified maximum ratings.

## **INSTALLATION SUPPORT OR TECHNICAL SUPPORT FOR THIS PRODUCT:**

800-887-5065 extension 1 contact@laserdiodesource.com



Part of the Laser Lab Source Group:

LaserLabSource.com LaserDiodeSource.com LaserDiodeControl.com

Laser Diode Technologies

Laser Lab Source Inc.
1820 W. Lincoln Street
Bozeman, MT USA 59715
contact@LaserDiodeSource.com
contact@LaserDiodeControl.com
800-887-5065