








Advanced performance products for laser scientists and engineers.

LaserDiodeSource.com | LaserLabSource.com | LaserDiodeControl.com

TECHNICAL SUPPORT & SALES IN NORTH AMERICA

800.887.5065 contact@LaserLabSource.com





Datasheet – Laser Diode Driver LDD-1125 (0- 30 A / 0- 27 V)



Support / First steps

Meerstetter Engineering provides technical support for all products and helps you to integrate a product into your solution. Most of your questions should be solved by reading the provided <u>user manuals</u> of the corresponding product or the <u>FAQ</u> (frequently asked questions).

For further help or if you have any other questions, please do not hesitate to contact us. We are happy to help you. You can contact us by email <u>support@meerstetter.ch</u>.

Meerstetter's product family compatibility

The Meerstetter LDD and TEC-Family have been developed to work along with each other. They share the same platform bus, communication protocol and hardware architecture. See Table for an Overview over the LDD- and TEC-Families.

LDD-Family		
LDD-1321	0-1.5 A / 0-14 V	CW, Add on TEC Controller available
LDD-1301	0-20 A / 0.5-45 V	1 ms - CW
LDD-1303	0-20 A / 1-120 V	1 ms - CW
LDD-1137	0-75 A / 0-70 V	0.5 µs - CW, modulated, QCW and pulsed modes
LDD-1124-SV	0-1.5 A / 0-15 V	1 µs - CW, modulated, QCW and pulsed modes
LDD-1121-SV	0-15 A / 0-15 V	1 µs - CW, modulated, QCW and pulsed modes
LDD-1125-HV	0-30 A / 0-27 V	1 µs - CW, modulated, QCW and pulsed modes
TEC-Family		
TEC-1092	±1.2 A / ±9.6 V	Micro, single channel
TEC-1091	±4 A / ±21 V	Small, single channel
TEC-1089-SV	±10 A / ±21 V	Medium, single channel
TEC-1162	±5 A / ±56 V	Medium-high, single channel
TEC-1090-HV	±16 A / ±30 V	Large, single channel
TEC-1163	±25 A / ±56 V	Extra-large, single channel
TEC-1161-4A	2 x (±4 A / ±21 V)	Small, dual channel
TEC-1161-10A	2 x (±10 A / ±21 V)	Medium, dual channel
TEC-1122-SV	2 x (±10 A / ±21 V)	Medium, dual channel
TEC-1166	2 x (±5 A / ±56 V)	Medium-high, dual channel
TEC-1123-HV	2 x (±16 A / ±30 V)	Large, dual channel
TEC-1167	2 x (±25 A / ±56 V)	Extra-large, dual channel

Advanced OEM Laser Diode Driver with Laser Power Control [LPC optional]



The LDD-1125 is an innovative laser diode driver that contains a specialized current source able to precision-drive laser diodes in continuous / modulated and pulsed or mixed operation. Equipped with optional laser power measurement circuitry (photodiode input), the LDD-1125-LPC can also be operated as a Laser Power Controller.

Core element of the LDD's internal current source is the generation of highly precise 333 ps timing PWM steps that results in high resolution and very low ripple current.

The output is short-circuit safe and can be chopped for up to 40 kHz pulsed-mode operation. Driving low inductive loads, ultra short fall and rise times are achievable.

For ultimate laser diode protection the supervision of critical system values is directly implemented in hardware. This results in very fast switch-off times (<8 μ s) in case of limit value violation. The LDD-1125 also monitors laser diode temperature (NTC thermistor input).

The LDD-1125 is fully digitally controlled; its firmware is upgradeable to offer various communication options and to meet specific customer requirements.

Current, laser power [LPC option] and temperature measurement hardware can be calibrated.

For basic applications or device evaluation, only a power supply and a laser diode need to be connected to the LDD-1125. The device can operate stand-alone in current control mode, internal generators (on board) allow for parametric definition of flexible output waveforms.

The included PC-Software (USB / RS485) facilitates configuration, control, monitoring and live diagnosis of the LDD. Current and laser power [LPC option] charting is also available from within the software.

All device settings are saved in non-volatile memory and can be backed up and restored.

For remote / OEM applications, the LDD-1125 may be fully controlled by a system bus that features RS485 communication, pulse, interlock and 6 reserve lines.

The LDD-1125 is part of the LDD-Family of Meerstetter laser diode drivers, which are designed to operate alongside devices of the TEC-Family of Peltier controllers. Both families of drivers share the same system bus protocol, design concept and technology.

Features

-HV (High Voltage) Version:

- DC Input Voltage: 12-36 V
- Output Voltage: 0-27 V

Power Stage:

- Output Current: 0-30 A, <0.2% Ripple Parallel operation on request
- Temperature Coefficient: Typ: 20 ppm/K
- CW Current Resolution: 0.6 mA
- Pulse Generation: CW Chopping
- Pulse Rise Time: 135 ns (L_{Load} ~ 10 nH)
- Pulse Frequency: up to 40 kHz

Laser Power Control (LPC): [LPC option]

- CW Laser Power Control: Configurable PID
- Start up phase: Fully parameterizable
- LPC Feedback. PD_{Current}: up to 4 mA

Main Features:


- Internal Generators: Nominal Current, Pulse
- Four Lookup Table with up to 16000 Samples
- Error: Ultra-Fast Switch-off for optimal LD protection
- Configuration / Diagnosis: on PC (via USB / RS485)
- Dimensions (L x W x H): 120 mm x 90 mm x 18 mm
- Efficiency: >94% (@ >50% Load)
- Cooling: over Base Plate

Interfaces

- USB 2.0 1kV isolated (FTDI Chip)
- 2x RS485 / RS422
- NTC for LD Temp.

Digital I/O, 3.3 V / 5 V

- Pulse Input
- Interlock (Enable)
- Generator Trigger Input
- And some more configurable functions

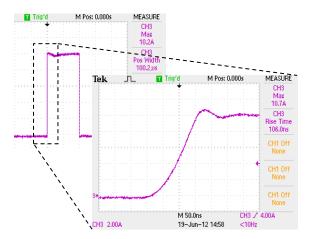

meerstetter engineering

Sa Member of Berndorf Group

Absolute Maximum Ratings

Supply voltage (DC)	37 V
Supply current (DC)	25 A (On Board Fuse)
Output current	35 A
Output voltage	V _{IN}

Operating Ratings

System base plate	< 50°C
Operation temperature	0 – 60°C
Storage	-30 – 70°C
Humidity	5 – 95%, non-condensing

Electrical Characteristics

Unless otherwise noted: T_{A} = 25°C, V_{IN} = 24 V, V_{LD} = 10 V, LDD-1125-HV

Symbol	Parameter	Conditions	Min	Тур	Max	Units
DC Power	Supply Input:					
VIN	Supply voltage		11.5	36	36.5	V
VIN_RIPPLE	Ripple tolerance				300	mV _{PP}
System Ch	aracteristics:					
η _{50%}	Power efficiency	@ 50% load		95		%
η90%	Power efficiency	@ 90% load		93		%

Output Characteristics

Unless otherwise noted: $T_A = 25^{\circ}C$, $V_{IN} = 24$ V, $V_{LD} = 10$ V, LDD-1125-HV

Symbol	Parameter	Conditions	Min	Тур	Max	Units
Output CW	1:				-	
IOUT	Current range		0		30	Α
T _{coefficient}	Temp. coefficient	$I_{out} = 30A$, $T_A = 25^{\circ}C - 50^{\circ}C$		20	35	ppm/K
IOUT_RES	Current resolution			0.6		mA
IOUT_RIPPLE	Current ripple	l _{out} > 2A		10	50	mA
Vout_max	Diode voltage		0		15	V
Vout_max	Diode voltage	LDD-1125-HV, V _{IN} = 36V	0		27	V
Vout_limit	Output voltage			V _{IN} - 8		V
Pout	Output power	V _{LD} = 15 V			450	W
f _{CW}	Current change	For L _{Load} <100 nH, higher f _{CW} are possible		3		kHz
IOUT_SLOPE	Current slope limit	I _{out} > 10A		0.2		A/us
Output Pul	se:					
t _{rise}	Current rise time	L _{Load} ~ 10 nH / V _{LD} = 2.5 V		135		ns
t _{fall}	Current fall time	L _{Load} ~ 10 nH / V _{LD} = 2.5 V		1200*		ns
t _{delay}	Delay pulse/current	L _{Load} ~ 10 nH / V _{LD} = 2.5 V		800		ns
t _{pH_min}	Minimal Pulse High	L _{Load} ~ 10 nH / V _{LD} = 2.5 V		1		us
t _{pL_min}	Minimal Pulse Low	L _{Load} ~ 10 nH / V _{LD} = 2.5 V		3		us

* Given by the discharge energy.

Safety Characteristics

Unless otherwise noted: $T_A = 25^{\circ}C$, $V_{IN} = 24$ V, $V_{LD} = 10$ V

Symbol	Parameter	Comments	Min	Тур	Max	Units
I/O Ports:						
toff_current	Overcurrent			6	8	μS
toff_opval	Operating Values	Voltages, currents		100		μS
toff_sfail	System failure	System status		100		ms

Laser Diode Temperature Measurement

Unless otherwise noted: $T_A = 25^{\circ}C$, $V_{IN} = 24$ V, NTC = $B_{25/100}$ 3988K R_{25} 10k								
Symbol	Parameter	Comments	Min	Тур	Max	Units		
Temperature Measurement								
RNTC	NTC Resistance			10		kΩ		
TRANGE	Temperature Range		-6		150	°C		
TPRECISION	Temp. Precision	Not calibrated			1.5	°C		

LDD-1125

LDD-1125



Solo Member of Berndorf Group

General Purpose Digital I/O Characteristics on X3 (RES1 ... RES8)

Unless otherwise noted: $T_A = 25^{\circ}C$, $V_{IN} = 24 \text{ V}$

Symbol	Parameter	Comments	Min	Тур	Max	Units
Input Char	acteristics:		•		•	
ViH	Logic high input threshold		2.35			V
VIL	Logic low input threshold				0.9	V
VIMAX	Maximum input voltage		-0.3		5.5	V
Van	Input voltage range	Analog input	0		3	V
Output Ch	aracteristics: (RES1 RES4)					
V _{OH}	Logic high output voltage		2.9	3.3		V
V _{OL}	Logic low output voltage			0	0.4	V
Rs	Series Resistor		170	200	230	Ω
Output Ch	aracteristics: (RES5 RES8)					
V _{OH}	Logic high output voltage		2.9	3.3		V
Vol	Logic low output voltage			0	0.4	V
Rs	Series Resistor		1160	1200	1240	Ω
ESD Prote	ction:					
VPP	ESD discharge	IEC61000-4-2			100	kV


Pulse Operation

However in Pulse Operation mode it is very important, that the inductance of the load is as low as possible. The inductance should be well in the low nH range. A rough rule is that every mm cable adds around 1nH inductance. For optimal performance the following Parameters should be meet.

- L_{LOAD} as low as possible
- V_{OUT} < 0.5 * V_{IN}

Operating Area (Pulse Mode)

Unless otherwise noted: T_{A} = 25°C, V_{IN} = 24 V, V_{LD} = 10 V, LDD-1125-HV

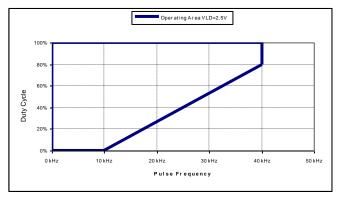


Test Conditions:

$$\begin{split} T_A &= 25^\circ C, \ V_{IN} = 24 \ V, \ I_{LD} = 20 \ A \\ V_{LD} &= 2.36 \ V @20A, \ R_{LD_Diff} = 68 \ m\Omega, \ L_{LD} = 10 \ nH \\ Laser diode directly mounted to the screw terminals. \end{split}$$

The maximum achievable pulse frequency depends on the connected load's characteristics. The reason for the performance derating for high frequencies and low duty-cycles (bottom-right part of the operating area) are the internal control topology and available FPGA hardware resource.



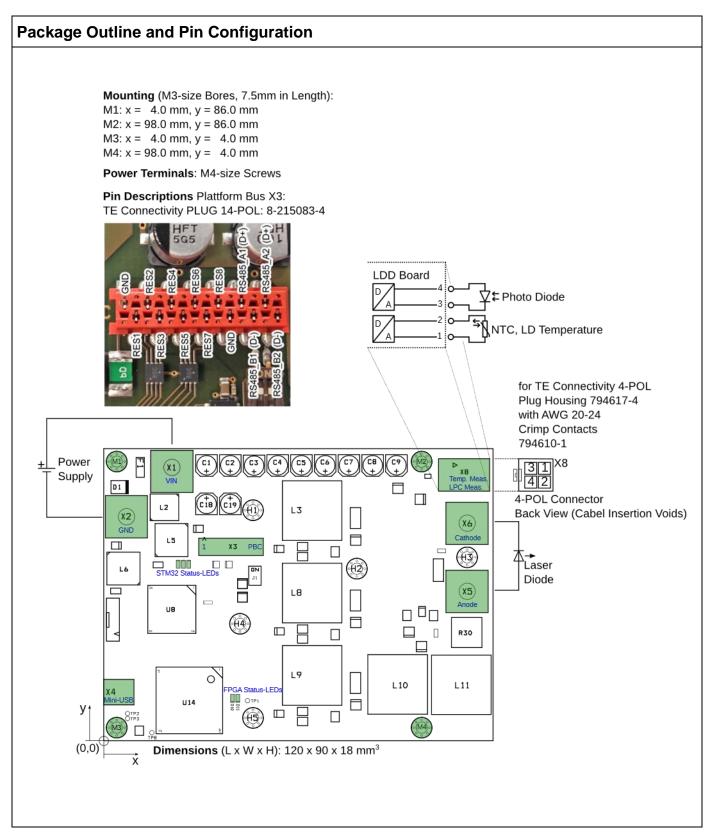

Laser diode, temperature probes, power supply and connectors not included.


4



Current-Controlled Operation-Modes and Communication Option

The LDD-1125 is an OEM high performance current source that is primarily designed to operate as a fast pulsed laser diode driver but that can also be used in CW mode. It is configured over an industry-standard RS485 or a USB connection, either GUI-driven using the included LDD Service Software, or by direct parameter control using the predefined communication protocol. Basic system status is visually indicated by on-board LEDs, more detailed status information can be polled at any time. The LDD-1125 can operate in a stand-alone configuration as well as in a remotely-controlled manner, with parameters adjusted on the fly. The laser diode driver is current-PID-controlled.

Configuration parameters further include: control source selection, maximum current limits, nominal current ramping, PID controller settings, NTC temperature sensor modeling coefficients, measurement circuitry calibration, error thresholds, communication watchdog, etc. Please refer to the user manual for further information.

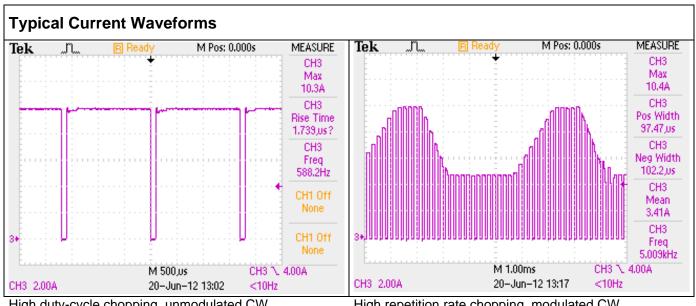



High repetition rate chopping, modulated CW.

LDD Service Software LDD Service Software The included LDD Service Software is a powerful tool that Operation Control Laser Power Co Chart Sett allows monitoring and full configuration of the LDD-1125 Input Source via a standard USB or an RS485 connection from a PC Current CW [A] running Windows. Current High [A] NA Current Low [A This tool is ideal for laboratory setups, product evaluation High Time [us] Low Time (us diagnosis, debugging and commissioning: Rise Time fus Fall Time [us] internal generators set up [see. illustration on the left] configuration import and export • Input Sourc data charting with trigger functionality High Time (us) Low Time (us error codes and built-in descriptions hardware configuration (e.g. calibration) Input Sourc maintenance (e.g. firmware upgrades) Please refer to the laser diode driver user manual for more information on features and system requirements. Login Login Current Power Reset LDD Expo Device Status

CW Current Modulation and Chopping by Internal Generators.



Laser Power -Controlled Operation-Mode [Devices with LPC Option only]


The LDD-1125-LPC is a laser power controller that is based on the LDD-1125, with additional light measurement circuitry (photodiode input). A user-defined 'Light System Scale' factor links the generated photocurrent to the absolute light power. The light PID controller's output is fed to the current controllers input. The nominal light power value may be CW, modulated CW (using internal generation) or remotely controlled. A configurable soft-start feature is available, as well.

Light Measurement Characteristics [Devices with LPC Option only]

Unless otherwise noted: $T_A = 25^{\circ}C$, $V_{IN} = 24 \text{ V}$, $V_{BIAS} = -3.3 \text{ V}$


Symbol	Parameter	Comments	Min	Тур	Max	Units	
Photodiode Input Characteristics:							
I _{PD}	Photodiode current				4	mA	
f _{ADC_LPC}	Sampling frequency	@ 16bit		0.5		MSps	

Typical LPC Waveforms

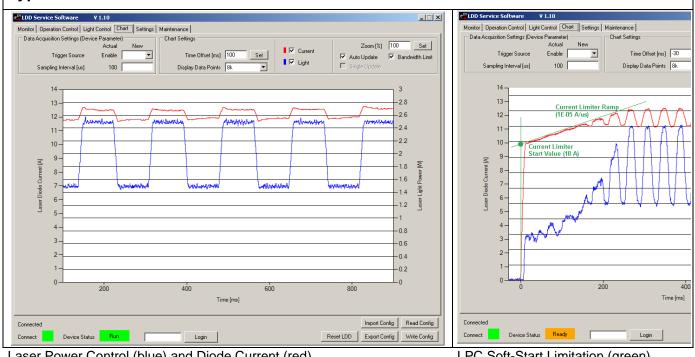

Laser Power Control (blue) and Diode Current (red).

LPC Soft-Start Limitation (green)

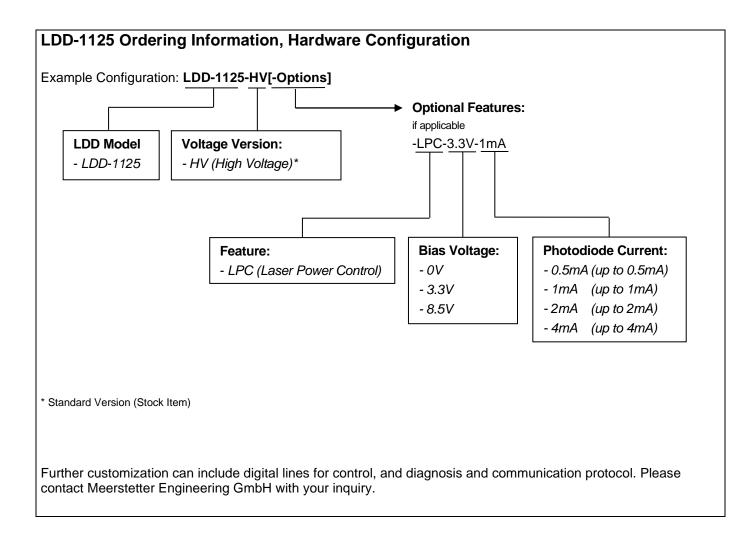

Meerstetter Engineering GmbH

Schulhausgasse 12

3113 Rubigen, Switzerland



Phone: +41 31 712 01 01 Email: contact@meerstetter.ch Website: www.meerstetter.ch

Solution Member of Berndorf Group

Meerstetter Engineering GmbH (ME) reserves the right to make changes without further notice to the product described herein. Information furnished by ME is believed to be accurate and reliable. However typical parameters can vary depending on the application and actual performance may vary over time. All operating parameters must be validated by the customer under actual application conditions.



LDD-1125